

BAXI

LUNA DUO-TEC

MP 1.35 - 1.50 - 1.60 - 1.70

en	CONDENSING GAS WALL-HUNG BOILERS
	<i>Instructions manual for users and installers</i>

Australian Agent and Distributor:



HYDROHEAT SUPPLIES PTY LTD
PO BOX 1045 / 6 HELEN KOB DRIVE,
BRAESIDE VICTORIA 3195
PH: (03) 9588 1299 - FAX: (03) 9588 2199



Dear Customer,
Our company is confident our new product will meet all your requirements. Buying one of our products guarantees all your expectations: good performance combined with simple and rational use.
Please do not put this booklet away without reading it first: it contains useful information for the correct and efficient use of your product.

Our company declares that these products are marked **CE** in compliance with the essential requirements of the following Directives:

- Gas Directive **2009/142/EC**
- Efficiency Directive **92/42/EEC**
- Electromagnetic Compatibility Directive **2004/108/EC**
- Low Voltage Directive **2006/95/EC**



Our company, constantly striving to improve the products, reserves the right to modify the details given in this documentation at any time and without notice. These Instructions are only meant to provide consumers with use information and under no circumstance should they be construed as a contract with a third party.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CONTENT

DESCRIPTION OF SYMBOLS	3
SAFETY WARNINGS.....	3
GENERAL PRECAUTIONS	4
ENERGY-SAVING TIPS	4
1. COMMISSIONING THE BOILER.....	5
1.1 ADJUSTING THE CH AND DHW FLOW TEMPERATURE	5
1.2 OPERATING MODES	5
2. PROLONGED SHUTDOWN. ANTI-FREEZE PROTECTION	6
3. GAS CONVERSION	6
4. FAULTS	6
5. BOILER INFORMATION MENU	7
6. FILLING THE SYSTEM.....	7
7. ROUTINE MAINTENANCE INSTRUCTIONS	7
8. SWITCHING OFF THE BOILER	7
INSTRUCTIONS PRIOR TO INSTALLATION	8
9. INSTALLING THE BOILER	8
SERVICE CLEARANCES	9
9.1 BOILER PUMP.....	9
10. INSTALLING THE FLUE	10
10.1 CONCENTRIC DUCTS	10
10.2 SEPARATE DUCTS	10
10.3 CASCADE DUCTS	11
11. ELECTRICAL CONNECTIONS	11
11.1 CONNECTING THE ROOM THERMOSTAT.....	12
11.2 ACCESSORIES NOT INCLUDED IN THE SUPPLY.....	12
SETTING PARAMETERS USING THE REMOTE CONTROL.....	13
EXTERNAL SYSTEM MANAGEMENT MODULES	14
12. SPECIAL FUNCTIONS	15
12.1 SYSTEM GAS EXTRACTION FUNCTION	15
12.2 CALIBRATION FUNCTION	15
12.3 CHIMNEY SWEEPER.....	15
13. FAULTS THAT CANNOT BE RESET BY THE USER	15
14. PARAMETERS SETTING	16
15. GAS VALVE CALIBRATION	17
15.1 GAS CONVERSION	18
16. ADJUSTMENT AND SAFETY DEVICES	19
17. PUMP CAPACITY/ HEAD	19
18. ANNUAL SERVICING	20
18.1 CLEANING THE CONDESATE TRAP	20
18.2 CLEANING THE HEAT EXCHANGER FUMES SIDE.....	21
18.3 CHECKING THE BURNER	21
18.4 COMBUSTION PARAMETERS	22
19. TECHNICAL SPECIFICATIONS	23

DESCRIPTION OF SYMBOLS



WARNING

Risk of damage to or malfunction of the appliance. Pay special attention to the warnings concerning danger to people.



DANGER OF BURNS

Wait for the appliance to cool down before working on the parts exposed to heat.



DANGER - HIGH VOLTAGE

Live components - electrocution hazard.



DANGER OF FREEZING

Possible formation of ice due to low temperatures.



IMPORTANT INFORMATION

Information to read with particular care as it is useful for the correct operation of the boiler.



GENERIC PROHIBITION

It is forbidden to do/use the things indicated alongside the symbol.

SAFETY WARNINGS

SMELL OF GAS

- Switch off the boiler.
- Do not activate any electrical device (such as switching on the light).
- Put out any naked flames and open the windows.
- Call an Authorised Service Centre.

SMELL OF COMBUSTION FUMES

- Switch off the boiler.
- Open all the doors and windows to ventilate the room.
- Call an Authorised Service Centre.

FLAMMABLE MATERIAL

Do not use and/or store highly flammable material (thinners, paper, etc.) near the boiler.
Servicing shall be carried out only by authorized personnel.
This appliance is unsuitable for use as a pool heater.

SERVICING AND CLEANING THE BOILER

Switch off the boiler before working on it.



The appliance is not intended to be used by persons with reduced physical, sensory or mental capacities, or who lack experience or knowledge, unless, through the mediation of a person responsible for their safety, they have had the benefit of supervision or of instructions on the use of the appliance.

GENERAL PRECAUTIONS

This boiler has been designed to heat water to a temperature lower than boiling point at atmospheric pressure. It must be connected to a central heating system and to a domestic hot water supply system according to its performance and power output. Before having the boiler installed by a qualified service engineer, make sure the following operations are performed:

- Make sure that the boiler is adjusted to use the type of gas delivered by the gas supply. To do this, check the markings on the packaging and the data label on the appliance.
- Make sure that the flue terminal draft is appropriate, that the terminal is not obstructed and that no exhaust gases from other appliances are expelled through the same flue duct, unless the latter has been specially designed to collect exhaust gas from more than one appliance, in compliance with current laws and regulations.
- Make sure that, if the boiler is connected to existing flue ducts, these have been thoroughly cleaned as residual products of combustion may detach from the walls during operation and obstruct the flow of fumes.
- To ensure correct operation and maintain the warranty, observe the following precautions:

1. DHW circuit

1.1 If the water is harder than 20 °F (1 °F = 10 mg calcium carbonate per litre of water), install a polyphosphate dispenser or an equivalent treatment system, compliant with current regulations.

1.2 Thoroughly flush the system after installation of the appliance and before use.

1.3 The materials used for the DHW circuit comply with Directive 98/83/EC.

2. Heating circuit

2.1 New system: Before installing the boiler, the system must be cleaned and flushed to eliminate residual thread-cutting swarf, solder and any solvents, using suitable off-the-shelf non-acid and non-alkaline products that do not damage metal, plastic and rubber parts. To protect the system from scale, use inhibitors such as SENTINEL X100 and FERNOX protector for heating circuits. Use these products in strict compliance with the manufacturers' instructions.

2.2 Existing system: Before installing the boiler, drain the system and clean it to remove sludge and contaminants, using suitable proprietary products. Recommended cleaning products are: SENTINEL X300 or X400 and FERNOX regenerator for heating circuits. Use these products in strict compliance with the manufacturers' instructions. Remember that the presence of foreign bodies in the heating system can adversely affect boiler operation (e.g. overheating and excessive noise of the heat exchanger).

Initial lighting of the boiler must be carried out by an authorised Service Engineer who must first ensure that:

- The rated data correspond to the supply (electricity, water and gas) data.
- That the installation complies with current regulations.
- The appliance is correctly connected to the power supply and earthed.



Failure to observe the above will render the warranty null and void. The names of the Authorised Service Centres are indicated in the attached sheet. Prior to commissioning, remove the protective plastic coating from the boiler. Do not use any tools or abrasive detergents to do this as you may damage the painted surfaces.



Do not leave any packaging (plastic bags, polystyrene, etc.) within the reach of children as they are a potential source of danger.

ENERGY-SAVING TIPS

Adjustment in the heating mode

Adjust the boiler flow temperature depending on the kind of system. For systems with radiators, set a maximum heating water flow temperature of approximately 60°C, and increase this value if the required room temperature is not reached. For systems with radiant floor panels, do not exceed the temperature indicated by the system designer. Use the External Sensor and/or Control Panel to automatically adjust the flow temperature to atmospheric conditions or the indoor temperature. This ensures that no more heat than that effectively necessary is produced. Adjust the room temperature without overheating the rooms. Every extra degree centigrade means consuming approximately 6% more. Also room ambient temperature depending on how the rooms are used. For example, the bedroom or the least used rooms can be heated to a lower temperature. Use the programmable timer and set the night-time room temperature at approximately 5°C lower than that during the day. There is no appreciable saving to be achieved by setting it any lower. Only in case of a prolonged absence, such as a holiday, should the temperature setpoint be lowered. Do not cover radiators as this prevents the air from circulating correctly. Do not leave the windows partially open to ventilate the rooms but open them completely for a short period.



BAXI a leading European manufacturer of hi-tech boilers and heating systems, has developed CSQ-certified quality management (ISO 9001), environmental (ISO 14001) and health and safety (OHSAS 18001) systems. This means that BAXI S.p.A. includes among its objectives the safeguarding of the environment, the reliability and quality of its products, and the health and safety of its employees.

Through its organisation, the company is constantly committed to implementing and improving these aspects in favour of customer satisfaction.



1. COMMISSIONING THE BOILER

To light the boiler correctly, proceed as follows:


- Check that the system pressure is correct (section 6);
- Power the boiler;
- Open the gas tap (yellow, positioned under the boiler);
- Select the required heating mode (section 1.2).



During initial ignition, the burner may not ignite (causing the boiler to shut down) until any air in the gas pipes is vented. In this case, repeat the ignition procedure until gas reaches the burner. To reset boiler operation, press for at least 2 seconds.

Key to BUTTONS

	DHW temperature adjustment (+ to increase the temperature and – to decrease it)
	Heating water temperature adjustment (+ to increase the temperature and – to decrease it)
	Boiler operating information
	Operating mode: DHW – DHW & Heating – Heating Only
	Off – Reset – Exit menu/functions

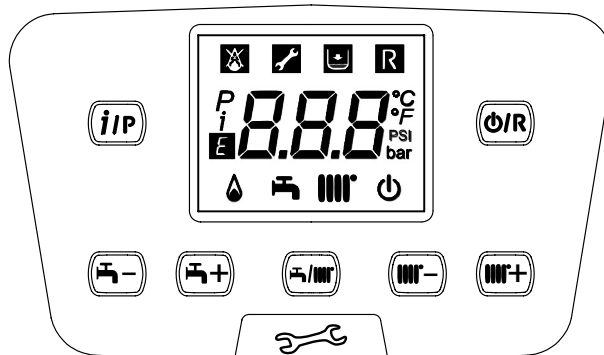

Key to SYMBOLS

	Off: heating and DHW disabled (only boiler anti-freeze protection is active)		Burner lit
	Fault preventing the burner from lighting		DHW operating mode enabled
	Boiler/system water pressure low		Heating mode enabled
	Technical Service Centre call-in		Programming menu
	Manually resettable fault ()		Boiler information menu
	Fault in progress		°C, °F, bar, PSI

1.1 ADJUSTING THE CH AND DHW FLOW TEMPERATURE

Press and respectively to adjust the CH and DHW flow temperature (if an external storage boiler is fitted). When the burner is lit, the display shows the symbol .

HEATING: while the boiler is operating in the heating mode, the display shows the flashing symbol and the heating delivery temperature (°C).

When connected to an External Sensor, indirectly adjust the room temperature (factory setting 20°C).

DHW: connect an external storage boiler to produce domestic hot water. While the boiler is operating in the DHW mode, the display shows the flashing symbol and the heating flow temperature (°C).



Note that in the bathroom an additional temperature control device has to be installed in order to avoid that the hot water temperature exceeds 50°C.

1.2 OPERATING MODES

SYMBOL DISPLAYED	OPERATING MODE
	DHW
	DHW & HEATING
	HEATING ONLY

To enable the appliance in **DHW - Heating** or **Heating only** press repeatedly and choose one of the three available modes.

To disable the boiler operating modes whilst keeping the anti-freeze function enabled, press . Just the symbol appears on the display (with the boiler not blocked).

2. PROLONGED SHUTDOWN. ANTI-FREEZE PROTECTION

Do not drain the whole system as filling up with water again could cause unnecessary and harmful scale to build up inside the boiler and the heating elements. If the boiler is not used during winter and is therefore exposed to the danger of frost, add some specific anti-freeze to the water in the system (e.g.: propylene glycol coupled with corrosion and scale inhibitors). The electronic boiler management system includes a "frost protection" function for the heating system which, when delivery temperature falls below 5°C, lights the burner until a delivery temperature of 30°C is reached.



The function is operative if: the boiler is electrically powered, there is gas, system pressure is normal and the boiler is not blocked.


3. GAS CONVERSION

The boilers can operate both on natural gas and Propane Gas. All gas conversions must be made by the AUTHORISED TECHNICAL SERVICE CENTRE.

4. FAULTS

The faults shown on the display are identified with the symbol **E** and a number (fault code). For a complete list of faults, see the following table.

If **R** appears on the display the fault must be RESET by the user.
To RESET the boiler, press **ON/OFF**. If faults are displayed frequently, call the Authorised Service Engineer.

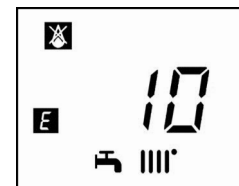

FAULTS TABLE

E	Description of fault	E	Description of fault
10	External probe sensor	125	No circulation safety trip (control performed via a temperature sensor)
20	NTC flow sensor	128	No flame
28	NTC fumes sensor	130	Fumes NTC tripped due to overtemperature
40	NTC flow sensor	133	Ignition failure (4 attempts)
50	NTC DHW sensor (only for heating-only model with storage boiler)	151	Boiler board internal fault
52	Solar DHW sensor (if connected to a solar plant)	152	Generic parameter setting error
73	Solar manifold sensor (if connected to a solar plant)	153	Hardware reset button pressed more than 10 seconds
83	Communication problem between boiler board and control unit. Probable short circuit on wiring.	160	Fan fault
84	Address conflict between control units (internal fault)	321	NTC domestic hot water sensor faulty
98	Accessory not detected or recognized (*)	343	Generic parameter setting error of solar plant (if connected to a solar plant)
109	Air in boiler circuit (temporary fault)	384	Abnormal light (parasite flame – internal fault)
110	Safety thermostat/exchanger flange thermostat (**) tripped due to over temperature (pump probably blocked or air in heating circuit)	385	Input voltage too low
111	Safety thermostat tripped due to overtemperature.	386	Fan speed threshold not reached
117	Pressure in hydraulic circuit too high	430	No circulation safety trip (control performed via a pressure sensor)
118	Pressure in hydraulic circuit too low	432	No functional hearth or safety thermostat tripped due to over temperature (E110)

(*) After powering up the boiler (or after a Reset for lockout), the error appears on the display once the self-check is completed. The fault code is displayed permanently if the accessory is not recognized.

(**) See Section "ADJUSTMENT AND SAFETY DEVICES".



In the event of a fault, the display backlighting indicates the error code. 5 reset attempts can be performed after which the boiler shuts down. Wait 15 minutes before attempting to reset the boiler again.

5. BOILER INFORMATION MENU

Press **(I/P)** to display the information indicated in the following table. Press **(O/R)** to exit.

i	Description	i	Description
00	SW Diagnostic Code	11	Zone 2 heating flow temperature
01	Heating flow temperature	12	Ion current
02	Outdoor temperature (if the outdoor sensor is fitted)	13	Burner working hours
03	External storage tank temperature (fitted models)	14	Zone 1 heating mode
04	DHW temperature (fitted models)	15	Zone 2 heating mode
05	Water pressure in heating system	16	DHW circuit operating mode
06	Heating return temperature	17	Boiler operating mode
07	Flue sensor temperature	18	Solar plant operating mode
08	Not used	19	Manufacturer information
10	Zone 1 heating flow temperature	20	Manufacturer information

6. FILLING THE SYSTEM

Periodically check that the pressure displayed on the pressure gauge is **1 - 1.5 bar**, with the system cold. If it is lower, turn the system filling tap installed by the installer. Open the tap very slowly in order to vent the air.



The boiler is fitted with a hydraulic pressure gauge which prevents the boiler from working if there is no water.



*If pressure drops occur frequently, have the boiler checked by the **AUTHORISED TECHNICAL SERVICE CENTRE**.*

7. ROUTINE MAINTENANCE INSTRUCTIONS

To keep the boiler efficient and safe, have it checked by the Authorised Service Centre at the end of every operating period. Careful servicing ensures economical operation of the system.

8. SWITCHING OFF THE BOILER

To turn off the boiler, disconnect the electric power supply using the two-pole switch. In the “Off” operating mode **(O)** the boiler stays off but the electrical circuits remain powered and the anti-freeze function remains active.

INSTRUCTIONS PRIOR TO INSTALLATION

Ensure any packaging or transit protection has been removed from the appliance before installation.

The following notes and instructions are addressed to fitters to allow them to carry out trouble-free installation. Instructions for lighting and using the boiler are contained in the 'Instructions for Users' section. This appliance shall be installed only by authorised persons and in accordance with the manufacturer's installation instructions, local gas fitting regulations, municipal building codes, electrical wiring regulations, local water supply regulations, AS/NZS 5601 - *Gas Installations* and any other statutory regulations. Refer to AS/NZS 5601 for gas pipe size.

Additionally, bear in mind the following:

- This boiler can be connected to any type of double- or single-pipe convector plate, radiator or thermoconvector. Design the system sections as usual, though, bearing in mind the available flow-head at the plate, as shown in section 16.
- Do not leave any packaging (plastic bags, polystyrene, etc.) within the reach of children as they are a potential source of danger.
- Initial lighting of the boiler must be carried out by an authorised Service Engineer, as indicated on the attached sheet.

Failure to observe the above will render the guarantee null and void.

ADDITIONAL PUMP WARNING

If an additional pump is used on the heating system, position it on the boiler return circuit. This will allow the correct operation of the water pressure switch.

SOLAR WARNING

If the instantaneous (mixed) boiler is connected to a system with solar panels, the maximum temperature of the domestic hot water entering the boiler must not exceed **60°C**.



When supplied, the boiler is not fitted with the following components: EXPANSION VESSEL - SYSTEM FILLING TAP - HYDRAULIC SEPARATOR. These must be mounted by the installer.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch: do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department. Installation and service must be performed by a qualified installer, service agency or the gas supplier.



Do not leave any packaging (plastic bags, polystyrene, etc.) within the reach of children as they are a potential source of danger.

Before Leaving: Check all connections for gas leaks with soap and water. DO NOT use a naked flame for detecting leaks. Ignite burner to ensure correct operation of gas valve, burners and ignition. When satisfied with the performance of the boiler, please instruct the user on the correct method of operation. In case the appliance fails to operate correctly after all checks have been carried out, refer to the authorised service provider in your area.

9. INSTALLING THE BOILER



Take special care when filling the heating system. In particular, open any thermostat valves in the system, ensure the water enters slowly in order to prevent the formation of air inside the primary circuit until operating pressure is reached. Lastly, vent any radiators in the system. BAXI declines all liability for damage deriving from the presence of air bubbles in the primary exchanger due to the incorrect or imprecise observance of the above.

The boiler must be installed on a flat vertical wall which is capable of supporting the weight of the boiler. The location must take account of the flueing method to be used and the position of the flue terminal, with regard to the requirements of AS5601.


Refer to AS5601 for gas pipe size details.

Refer to AS3688 for water pipe threaded fastening connections.


The template outline is shown in annex "SECTION" C at the end of this manual.

After deciding the exact location of the boiler, fix the template to the wall. Connect the system to the gas and water inlets present on the lower bar of the template. Make sure the rear part of the boiler (back) is as parallel as possible to the wall (otherwise, shim the lower part). Fit two **G1"** taps (flow and return) on the central heating circuit; these taps make it possible to carry out important operations on the system without draining it completely. On the Italian market, the system must comply with Raccolta R safety provisions (limit thermostat, safety pressure switch, fuel cut-off valve, etc.). Fit a hydraulic separator, sized according to maximum boiler and system pressure, downline from the hydraulic connectors of the boiler. If you are either installing the boiler on an existing system or replacing one, as well as the above, fit a settling tank under the boiler on the system return line in order to collect any deposits and scale circulating in the system after flushing. After fixing the boiler to the template, connect the flue and air ducts, supplied as accessories, as described in the following sections. Connect the siphon to a drain trap, making sure the slope is continuous. Avoid horizontal stretches. The boiler is electronically fitted out for connection to an external storage boiler.


SERVICE CLEARANCES

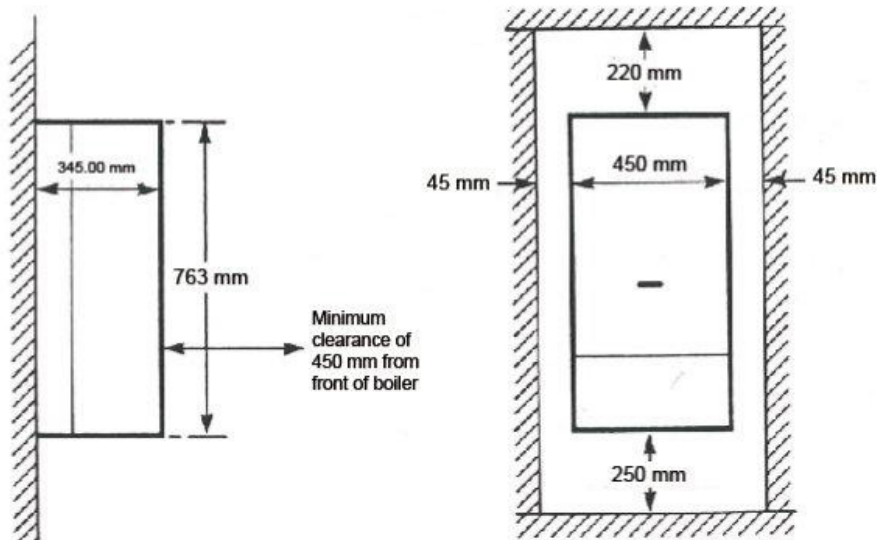

CLEARANCES REQUIRED FOR CLOSET INSTALLATION

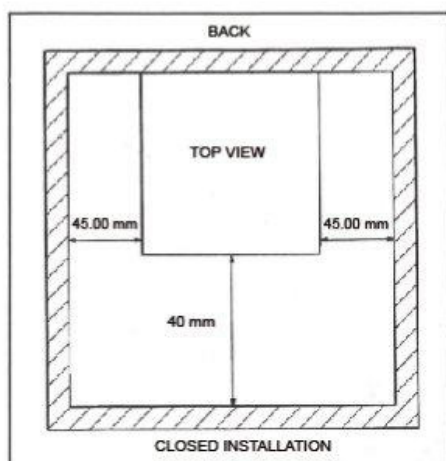

CLEARANCES FOR COMBUSTIBLES

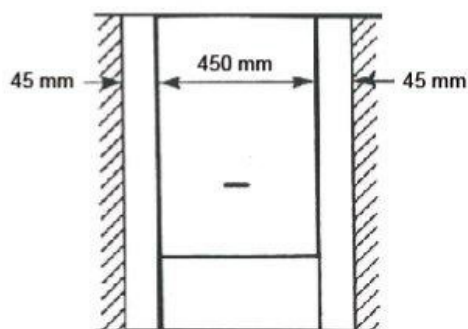

- The boiler must not be installed on carpeting.
- Keep boiler area clear and free from flammable vapors and liquid.



Tighten the boiler water connections with care (maximum tightening torque 30 Nm).



- IMPORTANT:** when connecting an instantaneous boiler (mixed) to a system with solar panels, the maximum temperature of the DHW at the boiler inlet must not be greater than:
- 60°C with a flow limiting device
 - 70°C without a flow limiting device

9.1 BOILER PUMP

The boiler pump (14 - "SECTION" A) is modulating and circulates the water between the boiler and the hydraulic separator (for hydraulic performance see the charts in annex "SECTION" E). The water in the system is circulated by the relative pumps ("SECTION" F).

Check that the flow of the water circulating in the boiler is not less than the value indicated in the following table:

Model	Minimum flow rate (l/h)	Operating flow rate (l/h) with BAXI low loss header
1.35	800	1950
1.50	800	
1.60	1000	2100
1.70	1500	2750

10.INSTALLING THE FLUE

The boiler is easy and flexible to install thanks to the extensive range of available accessories, as described below. The boiler has been designed for connection to a vertical or horizontal coaxial flue-air duct. The boiler can also be used with separate ducts using the accessory splitting kit.


WARNINGS

C13, C33 The terminals for separate flues must be fitted inside a 50 cm square. Detailed instructions are provided with the individual accessories.

C53 Do not fit the flue and air duct terminals on opposite walls of the building.

C63 The maximum pressure drop ΔP of the ducts must not exceed the values indicated in table 1A. The ducts must be certified for this specific use and for a temperature in excess of 100°C. The flue terminal must be certified to EN 1856-1.

C43, C83 The flue terminal or flue duct must be suitable for the purpose.

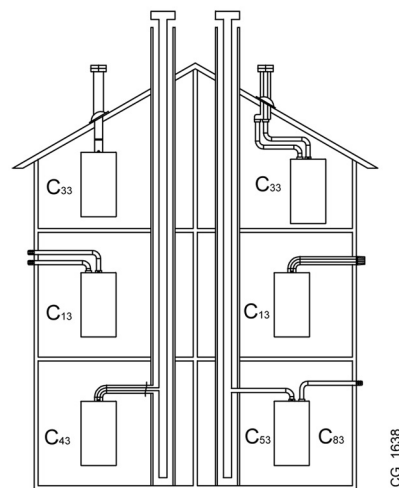

CG_1638



For optimal installation, the accessories supplied by the manufacturer should be used.

TABLE 1A

If the flue and air ducts installed are not supplied by our company, make sure they are certified for the type of use and have a maximum pressure drop as indicated in the table to the side.

	ΔP (Pa)
1.35 MP	160
1.50 MP - 1.60 MP - 1.70 MP	270



To optimise operating safety, make sure the flue ducts are firmly fixed to the wall with suitable brackets. The brackets must be positioned over the joints at a distance of approximately 1 metre from one another.



Make sure there is a minimum downward slope of 5 cm per metre of duct towards the boiler.




SOME OUTLET DUCT INSTALLATION EXAMPLES AND THEIR RELATIVE MAXIMUM LENGTHS ARE SHOWN IN ANNEX "SECTION" D AT THE END OF THIS MANUAL.

10.1 CONCENTRIC DUCTS

This type of duct is used to discharge exhaust fumes and draw combustion air both outside the building and if a LAS flue is fitted. The 90° coaxial bend allows the boiler to be connected to a flue-air duct in any direction as it can be rotated by 360°. It can also be used as a supplementary curve combined with a coaxial duct or a 45° curve.

If fumes are discharged outside the building, the flue-air duct must protrude at least 18 mm from the wall to allow an aluminium weathering surround to be fitted and sealed to avoid water infiltrations.

- A 90° bend reduces the total duct length by 1 metre.
- A 45° bend reduces the total duct length by 0.5 metres.
- The first 90° bend is not included when calculating the maximum available length.

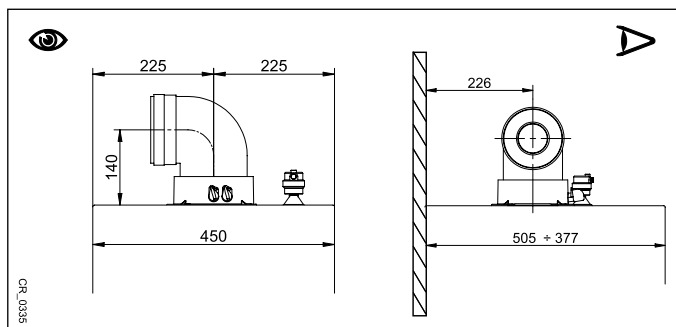


10.2 SEPARATE DUCTS

This type of installation makes it possible to discharge exhaust fumes both outside the building and into single flue ducts. Comburent air can be drawn in at a different location from that of the flue terminal. The accessory splitting kit comprises a flue duct adaptor (80) (B) and an air duct adaptor (A). For the air duct adaptor, fit the screws and seals previously removed from the cap.

The 90° bend is used to connect the boiler to the inlet and outlet ducts, adapting them to various requirements. It can also be used as a supplementary curve combined with a duct or a 45° bend.

- A 90° bend reduces the total duct length by 0.5 metres.
- A 45° bend reduces the total duct length by 0.25 metres.
- The first 90° bend is not included when calculating the maximum available length.

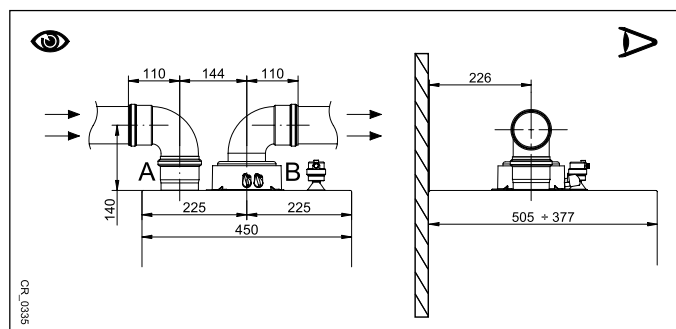


10.3 CASCADE DUCTS

This type of duct evacuates the products of combustion of more than one boiler in a cascade connection through a shared fumes collector. The collector may only be used to connect the boilers to the flue duct. Available diameters are: Ø125 mm - Ø160 mm and Ø200 mm. A range of accessories is available on request.

TABLE 1B

BOILER MODEL	MAXIMUM NUMBER OF BOILERS IN CASCADE CONNECTION			PARAMETER P60(a) Revs/min (rpm) at minimum Power	
	Ø125 mm (200 kW Max)	Ø160 mm (250 kW Max)	Ø200 mm (500 kW Max)	G20	G31
1.35	5	7	12	1700	1700
1.50	4	5	10	1700	1700
1.60	3	4	9	1620	1620
1.70	2	3	7	1470	1470

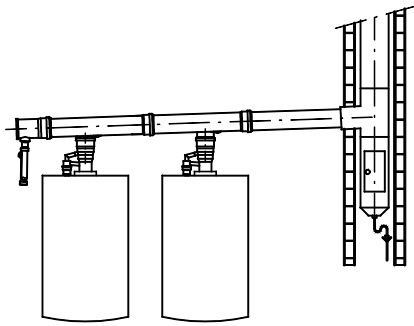


In this outlet typology, a fumes clapet valve (no-return valve), Ø 80/110 mm, must be fitted to each boiler. Change the parameter P60 as shown in table 1B following the procedure described in chapter 14.



The fumes duct must be calculated by a qualified technician during the system design stage, as required by current regulations.

11. ELECTRICAL CONNECTIONS

This machine is only electrically safe if it is correctly connected to an efficient earth system in compliance with current safety regulations. Connect the boiler to a 230V single-phase earthed power supply using the supplied three-pin cable, observing correct Live-Neutral polarity.

Use a double-pole switch with a contact separation of at least 3 mm.

When replacing the power supply cable, fit a harmonised "HAR H05 VV-F" 3x0,75 mm² cable with a maximum diameter of 8 mm. To access the terminal block, remove the front boiler panel (fixed with two screws at the bottom), turn the control box downwards and access terminal blocks **M1**, **M2**, **M3**, used for the electrical connections, after removing the protective cover. The 3.15 A fast-blowing fuses are incorporated in the power supply terminal block (to check and/or replace the fuse, pull out the black fuse carrier).

SEE WIRING DIAGRAM IN ANNEX "SECTION" B AT THE END OF THIS MANUAL



Make sure that the overall rated power input of the accessories connected to the appliance is less than 2A. If it is higher, install a relay between the accessories and the electronic board.



The connections in terminal blocks M1- M3 are high voltage (230 V). Before making connections, make sure the appliance is disconnected from the power supply. Respect the input polarity on terminal block M1: L (LINE) - N (NEUTRAL).

TERMINAL BLOCK M1

(L) = Live (brown)

(N) = Neutral (light blue).

(⊕) = Earth (yellow-green).

(1) (2) = contact for Room Thermostat.



Put back the jumper on terminals 1-2 of boiler terminal block M1 if the room thermostat is not used or if the Remote Control, supplied as an accessory, is not installed.

TERMINAL BLOCK M2

Terminals 1 (back-lighting) - 2 (earth) - 3 (+12V): connection to the Remote Control (low voltage) supplied as an accessory.


Terminals 4 - 5 (common): External Probe connection (supplied as an accessory)

Terminals 6 - 5 (common): 2nd Auxiliary Probe (probes for solar plant, cascade system, zone system, etc.).

Terminals 7 - 5 (common): 1st Auxiliary Probe (probes for solar plant, cascade system, zone system, etc.).

Terminals 9-10: storage boiler sensor connection.

Terminal 8: not used.

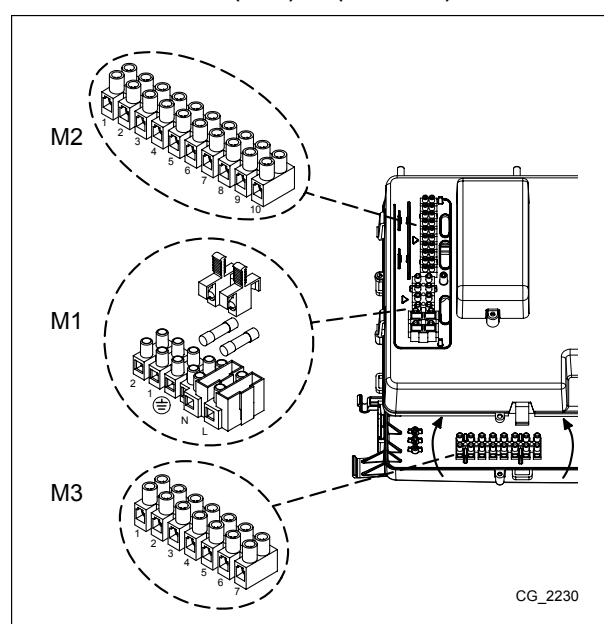

CG_2230

TERMINAL BLOCK M3

Terminals 1 - 3: not used.

Terminal 4 - 5: storage boiler pump connection.

Terminal 6 - 7: system heating pump connection (external downline from hydraulic separator).



If the appliance is connected to an underfloor system, install a limit thermostat to prevent the latter from overheating.



Use the relative cable grommets at the bottom of the boiler to thread the cables through to the terminal blocks.


11.1 CONNECTING THE ROOM THERMOSTAT



The connections in terminal block M1 are high voltage (230 V). Before making connections, make sure the appliance is disconnected from the power supply. Respect polarity L (LIVE) - N (NEUTRAL).

To connect the Room Thermostat to the boiler, proceed as described below:

- Switch off the boiler;
- Access the terminal block **M1**;
- Remove the jumper from the ends of contacts **1-2** and connect the wires of the volt free Room Thermostat;
- Switch on the boiler and make sure the Room Thermostat works correctly.

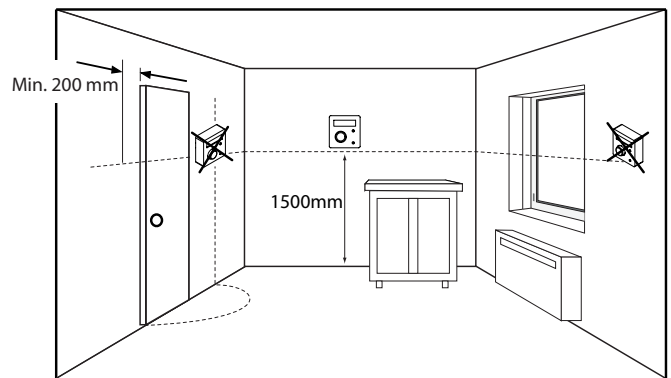

11.2 ACCESSORIES NOT INCLUDED IN THE SUPPLY


11.2.1 REMOTE CONTROL



The wire (1) from the boiler terminal block M2 powers the display backlighting (12 V). It is not necessary to connect this wire to make the Remote Control work.

To operate the boiler with the Remote Control mounted on the wall, purchase accessory **A** supplied with the base **A1**. Also see the mounting and operation instructions supplied with the kit **A**. Proceed as follows:

- Switch off the boiler.
- Pass the three wires from the boiler terminal block **M2** through the hole in the base **A1** to apply to the wall.
- Connect wires **1-2-3** of the boiler terminal block **M2** to terminals **(1)-(2)-(3)** of the base terminal block **A1** respectively.
- Fix the base **A1** to the wall using the expansion grips and screws supplied with the accessory.
- Apply the Control Panel **A** to the base fixed to the wall, taking care not to apply excessive force.
- Power the boiler making sure that the Remote Control lights up.

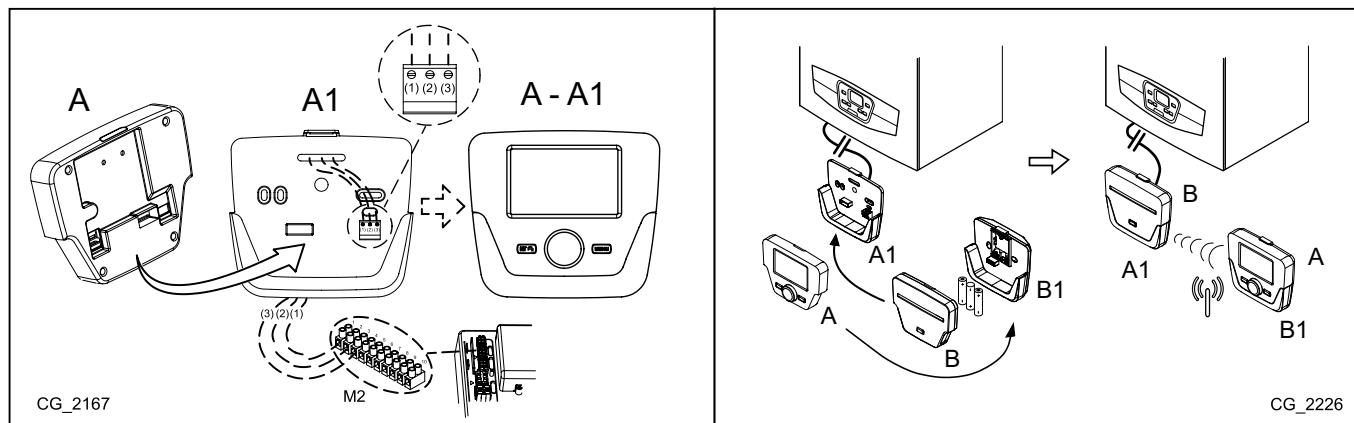

A	Control Panel	A1	Base for wall-mounted Control Panel		
B	Led interface accessory	B1	Base for Led interface accessory		
(1)	Display backlighting +12V	(2)	Earth connection		

Use the Remote Control to set the programmable timer for heating and DHW. See the instructions supplied with the accessory.



**ALL MODIFIED PARAMETERS SHOULD BE NOTED
DOWN IN THE TABLE AT THE END OF THIS MANUAL.**

When the Control Panel is wall-mounted enable the **room sensor** and **flow temperature modulation** as follows:

For correct operation of the environment unit during the reduced time band it is necessary to set the parameter 5977 = "none".

B) FLOW TEMPERATURE MODULATION

To set flow temperature modulation, disable parameter **742** (HC1). Proceed as follows:

- Access menu **2**.
- **Temps / mode CH1** **742** (Flow temp setpoint room stat) to confirm.
- (anti-clockwise) "----" then to confirm.



If, when turning the knob B on the main menu, the display visualises the boiler flow temperature instead of the ambient temperature, parameter 742 has not been set correctly.

After every system configuration (e.g.: solar combination, connection an external storage boiler, etc.) perform the following procedure to update the boiler board to the new configuration:

- Access menu 2 as indicated at the beginning of this section.
- **Configuration** programme row **6200** then .
- **Yes** then to confirm.

ZONE SYSTEM WITH INSTALLATION OF THE REMOTE CONTROL

The electrical connection and the adjustments required to manage a system divided into zones with use of the Remote Control differs according on the accessories connected to the boiler. To install and configure, see the instructions of the **Expansion Module** supplied as an accessory.

ADJUSTING THE TEMPERATURE OF THE HIGH TEMPERATURE HEATING SYSTEM

To avoid frequent starting and stopping, raise the minimum temperature setpoint of the boiler in the heating mode by setting parameters **740**, to not less than 45°C, using the procedure described in point **B**.

TEMPERATURE ADJUSTMENT ON LOW TEMPERATURE HEATING SYSTEM

For a low temperature system (such as underfloor heating), reduce the maximum CH temperature setpoint on the boiler by setting parameter **741** (point B) to a value not greater than 45°C.

11.2.2 EXTERNAL SENSOR

To connect this accessory, see figure to side (terminals **4-5**) and the instructions supplied with the sensor.

With the External Sensor connected, on the boiler control panel move the set climate curve **Kt** in parallel (see annex "**SECTION**" **E** and parameter **P03** in the table in section 14). To increase room temperature press **+**, to decrease press **-**.


SETTING THE "Kt" CLIMATE CURVE

To set the required kt climate curve, proceed as follows:

- Access the menu as described in section 14.
- Select parameter **P03**.
- Select the climate curve from among those available, see the curve chart in annex "**SECTION**" **E** at the end of this manual (the preset curve is 1.5).

KEY TO CURVE CHART Kt - "**SECTION**" **E**

	Flow temp		Outside temp
--	-----------	--	--------------

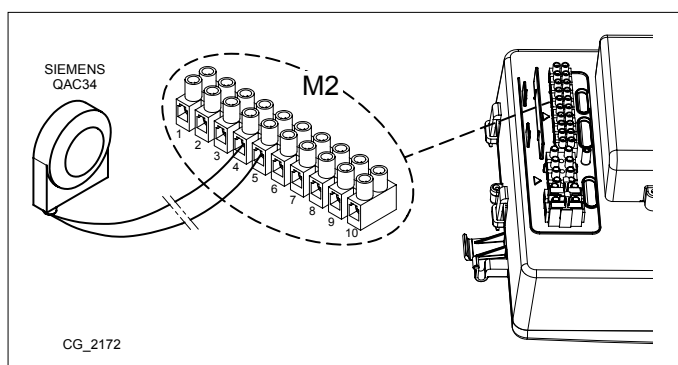

11.2.3 HEATING SYSTEM PUMP

Install the system pump downline from the hydraulic separator. Choose the pump according to the required system capacity/head characteristics (see annex "**SECTION**" **F**).

11.2.4 EXTERNAL STORAGE BOILER

The boiler can be electrically connected to an external storage boiler. A diagram of the hydraulic connection of the external storage boiler is shown in annex "**SECTION**" **F**. Connect the storage boiler pump to terminals **4-5** of the **M3** terminal block (see annex "**SECTION**" **B**). Install the storage boiler downline from the hydraulic separator. Use the sensor supplied as an accessory and connect it to terminals **9-10** of terminal block **M2** (see annex "**SECTION**" **B**). Make sure that the exchange capacity of the storage boiler coil is appropriate for the power of the boiler.

EXTERNAL SYSTEM MANAGEMENT MODULES

The boiler can independently manage up to three heating circuits by using external accessories such as room units, remote controls and external modules (AGU 2.550 and AVS 75). The boiler electronics also comprises a wide range of functions for personalising and managing various system types. To assure correct system operation, a number (from 1 to 3) must be assigned to each accessory in order to allow the boiler board to recognise it. Consequently, carefully read the instructions provided with the accessories.

11.2.5 MIXED ZONES ("SECTION" F)

A mixed zone can be managed using the **AVS75** external module, supplied as an accessory. This accessory can manage: a zone pump, a mixing valve, a temperature sensor, a limit thermostat and a room thermostat. To connect the components and adjust the system read the manual provided with the accessory.

11.2.6 BOILERS IN A CASCADE CONNECTION ("SECTION" F)

The **AVS75** external unit, supplied as an accessory, is used to manage a heating system with up to 16 boilers connected in a cascade arrangement and a possible separate storage boiler providing domestic hot water. This accessory, connected to one of the cascade boilers, can directly control the circuit components up to a maximum of 3 independent relay outlets, 2 temperature sensors, 1 high voltage limit thermostat connector and one 1 control input (e.g.: room thermostat). The system also requires an **OCI 345** interface on each boiler comprising in the cascade arrangement. To adjust boiler parameters see section "PARAMETER SETTINGS". To connect the components and adjust the system read the manual provided with the accessory.

11.2.7 SOLAR PLANT ("SECTION" F)

Use the **AGU 2.550** external unit, supplied as an accessory, to manage a solar plant. To connect the plant, see the instructions supplied with the accessory.



THE HYDRAULIC DIAGRAMS OF THE CASES DESCRIBED CAN BE CONSULTED IN ANNEX "SECTION" F AT THE END OF THIS MANUAL

12. SPECIAL FUNCTIONS

12.1 SYSTEM GAS EXTRACTION FUNCTION

This function is used to facilitate the elimination of the air inside the heating circuit when the boiler is first installed or after maintenance when the water is drained from the primary circuit.

To enable the system gas extraction function press buttons **(i/p)** **(m/-)** together for 6 seconds. When the function is active, **On** appears on the display for a few seconds, followed by programme row **312**.

The electronic board will activate a pump on/off cycle lasting 10 minutes. The function will automatically stop at the end of the cycle. To manually exit this function, press the above buttons together for 6 seconds once again.

12.2 CALIBRATION FUNCTION

To calibrate the gas valve, proceed as follows:

- Press buttons **(m/+)** and **(i/p)** together for at least 6 seconds. When the function is enabled, the displays shows "On" for a few seconds followed by programme row "304" alternated with the % of boiler power.
- Press **(m/+)** **(m/-)** to gradually adjust power (sensitivity 1%).
- To exit press both buttons together for at least 6 seconds, as described in point one




Press **(O/R)** to display the instantaneous flow temperature for 15 seconds.


12.3 CHIMNEY SWEEPER

When this function is enabled, the boiler generates maximum heating power. To enable the function, proceed as follows:

- press **(m/-)** **(O/R)** together for 6 seconds. The display shows "303" alternated with the power output of the boiler.
- Press **(m/-)** and **(m/+)** to adjust boiler power 1=minimum, 2=maximum DHW, 3=maximum heating.
- To interrupt the function repeat the procedure described in point one.

13. FAULTS THAT CANNOT BE RESET BY THE USER

In case of **FAULTS** that cannot be reset by pressing **(O/R)** (such as E151 or exceeding 5 manual RESET attempts by the user) RESET the board by pressing the black button (**R**) located under the rubber cap (symbol ) of the front control panel (figure to side).

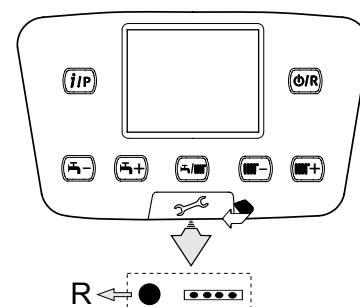

14.PARAMETERS SETTING

To programme the parameters of the boiler electronic board, proceed as follows:

- Press together and hold them down for 6 seconds until programme row "P02" appears on the display alternated with the set value (°C);
- Press and hold down for 6 seconds until "On" appears on the display. Release the button and "P01" appears on the display;
- Press to scroll the list of parameters;
- Press , the value of the selected begins flashing, press to change the value;
- press to confirm the value or press to exit without saving.



Further information concerning the parameters listed in the following table are supplied together with the required accessories.

(a)	(b)	ZONE 1 HEATING PARAMETERS (main zone)		Factory setting	Minimum	Maximum
P01	700	*Operating mode (0=Frost Protection, 1=Timed, 3=T.comfort)	-	3	0	3
P02	712	*Reduced ambient temperature	°C	16	4	35
P03	720	**"Kt" curve slope	-	1,5	0,1	4
P04	721	**"Kt" curve drift	-	0	- 4,5	4,5
P05	726	**"Kt" curve adaptation (0=off)	-	1	0	1
P06	740	Flow temperature setpoint (minimum value)	°C	25	8	80
P07	741	Flow temperature setpoint (maximum value)	°C	80	25	80
P08	742	*Enable modulating temperature if set = "----"	°C	80	25	80
P09	750	*Room influence ("----" = disabled)	%	50	1	100
P10	834	*Opening/Closing speed of mix valve	S	30	30	873

ZONE2 HEATING PARAMETERS (with accessory Expansion Unit)

P11	1000	*Operating mode (0= Frost Protection, 1=Timed, 3=T.comfort)	°C	3	0	3
P12	1010	*Comfort room temperature	°C	20	4	35
P13	1012	*Reduced room temperature	°C	16	4	35
P14	1020	**"Kt" curve slope	-	1,5	0,1	4
P15	1021	**"Kt" curve drift	-	0	- 4,5	4,5
P16	1026	**"Kt" curve adaptation (0=off)	-	1	0	1
P17	1040	Flow temperature setpoint (minimum value)	°C	25	8	80
P18	1041	Flow temperature setpoint (maximum value)	°C	80	25	80
P19	1042	*Enable modulating temperature if set = "----" (flow temp. setpoint if P63=0)	°C	80	25	80
P20	1050	*Room influence ("----" = disabled)	%	50	1	100
P21	1134	*Opening/Closing speed of mix valve	s	30	30	873

DHW PARAMETERS

P22	1620	Operating mode in DHW (with Remote Control) 0=always enabled, 1=according to hourly heating programme, 2= according to hourly DHW programme.	-	2	0	2
P23	1640	Anti-legionella function Disabled 0=disabled, 1=periodic (depending on P24)	-	0	0	1
P24	1641	Periodic anti-legionella function enable (only if P23 =1) 1=daily, 2..6=intervals of 2..6 days, 7=once a week	-	7	1	7
P25	1663	Circulation temperature setpoint (additional DHW pump)	°C	45	8	80
P26	5470	Preheating time for DHW circuit (1=10' -- 144=1440')	min	0	0	144

BOILER PARAMETERS

P27	2243	Minimum boiler off time	min	3	0	20
P28	2217	Frost Protection setpoint	°C	5	-20	20
P29	2250	Pump post-circulation time	min	3	0	240
P30	2441	Max. fan speed (heating)	rpm	xxx	0	8000
P31	2455	Minimum boiler off differential	°C	5	0	20
P32	2720	Not used (Do NOT change this parameter)	-	0	0	1
P33	2721	Not used (Do NOT change this parameter)	-	1	1	2

SOLAR PLANT PARAMETERS (with accessory Expansion Unit)

P34	3810	Temperature - on differential	°C	8	0	40
P35	3811	Temperature - off differential	°C	4	0	40
P36	3830	Pump start function ("----" = disabled)	min	---	5	60
P37	3850	Solar panel manifold overheating protection ("----" = disabled)	°C	---	30	350
P38	5050	DHW boiler tank charging temperature max	°C	65	8	95
P39	5051	Maximum temperature of storage tank	°C	90	8	95

CONFIGURATION

P40	5700	Not used (Do NOT change this parameter)	-	---	---	---
P41	5710	Zone 1 heating circuit (1=enabled)	-	1	0	1
P42	5715	Zone 2 heating circuit (1=enabled)	-	0	0	1
P43	5730	DHW sensor (1=Tank sensor, 2=Thermostat, 3=instantaneous sensor)		1	1	3
P44	5890	Not used (Do NOT change this parameter)	-	33	0	43
P45	5931	*BX2 sensor input (first auxiliary sensor – section 11)	-	0	0	19
P46	5932	*BX3 sensor input (second auxiliary sensor – section 11)	-	0	0	19
P47	5977	*Input H5 (multifunction input – 18=Room thermostat)	-	18	0	32
P48	6020	*Configuration of accessory Expansion Unit	-	0	0	7
P49	6024	Input EX21 module 1 (configuration of HC Safety Thermostat)	-	0	0	1
P50	6046	Input H2 module 1 (multifunction input)	-	0	0	58

P51	6097	Sensor type collector (1= NTC, 2= Pt 1000)	-	2	1	2
P52	6110	Building time constant (depending on the insulations of the building)	h	15	0	50
P53	6220	Software version	-	---	0	99
P54	6600	LPB device address (BUS connection)	-		1	16
P55	6601	LPB segment address (BUS connection)	-		0	14
P56	6640	Clock time source	-		0	3

MAINTENANCE

P57	7045	Time after maintenance	month	xxx	0	240
P58	6704	View/Hide secondary fault internal code (0=no)	-	1	0	1

BURNER CONTROL

P59	9512	Required ignition speed	rpm	xxx	0	8000
P60	9524	Required minimum operating speed (low speed)	rpm	xxx	0	8000
P61	9529	Required maximum operating speed (high speed)	rpm	xxx	0	8000

BOILER CONTROL PANEL PARAMETERS

P62	-	Unit of measurement (1=bar, °C – 2=PSI, °F)	-	1	1	2
P63	-	Control panel operation: (1=central, 0=local)	-	1	0	1
P64	-	Software version	-	xx	0	999

* see "Accessories not included in supply"

xx: the value depends on the software version xxx: the value depends on the type of boiler

(a): parameters read on the front boiler panel (fixed control panel) (b): parameters read on the Remote Control

15. GAS VALVE CALIBRATION

To calibrate the gas valve, enable the calibration function as described in section 12.2 and carry out the following operations:


1) Calibrating MAXIMUM heat output.

Check that the CO₂ measured on the flue duct, with the boiler operating at maximum heat capacity, matches that indicated in table 2 (allowed tolerance +/- 0.5%). If it does not, turn the adjustment screw (V) on the gas valve. Turn the screw clockwise to decrease the level of CO₂ and anti-clockwise to increase it (allowed tolerance +/- 0.2%).

2) Calibrating REDUCED heat output

Check that the CO₂ measured on the flue duct, with the boiler operating at minimum heat capacity, matches that indicated in table 2 (allowed tolerance +/- 0.5%). If it does not, turn the adjustment screw (K) on the gas valve. Turn the screw clockwise to increase the level of CO₂ and anticlockwise to decrease it (allowed tolerance +/- 0.2%).

V	Gas flow adjustment screw	Pi	Gas supply pressure tap
K	OFFSET adjustment screw		

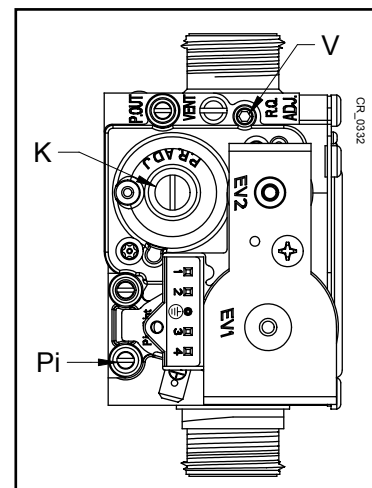

15.1 GAS CONVERSION



When converting from natural gas to propane (LPG), before calibrating the gas valve as described above, replace the venturi assembly (B) as indicated in the figure. To achieve this, release the gas pipe (fixed with clips for models 1.35 - 1.50 -1.60 and threaded nut G1" for model 1.70) and remove the three screws securing the flange. Afterwards, make sure there are no gas leaks. Modify the parameters (fan rpm) as indicated in table 2 following the procedure described in section 14.

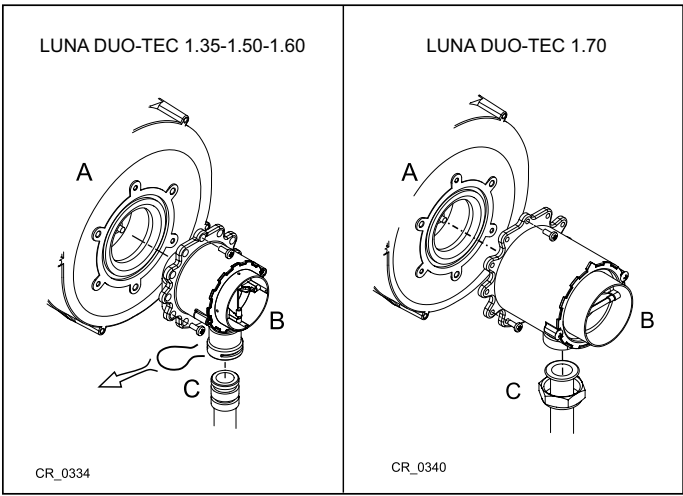


TABLE 2

	PARAMETERS - rpm						VEN-TURI Ø (mm)	GAS NOZZLES Ø (mm)		CO2 Min (%)		CO2 Max (%)		Max. CO (ppm)								
	P60 **		P30 - P61 **		P59 **																	
Boiler model	Min. power		Max. power		Ignition power		Natural Gas - Propane Gas	Natural Gas	Propane Gas	Natural Gas	Propane Gas	Natural Gas	Propane Gas	Natural Gas / Propane Gas								
	Natural Gas	Propane Gas	Natural Gas	Propane Gas	Natural Gas	Propane Gas																
	1.35	1500	1500	5000	4800	2300									3000	24	3.7 (n°2)	2.95 (n°2)	*8.5	*9.5	*9.0	*10
	1.50	1500	1500	6650	6400	2300									3000	24	3.7 (n°2)	2.95 (n°2)	*8.5	*9.5	*9.0	*10
	1.60	1420	1420	6750	6600	2000									2500	28	4.6 (n°2)	3.45 (n°2)	*9.0	*9.4	*9.0	*10.1
1.70	1270	1270	6450	6100	2100	2500	30	5.3 (n°2)	4.0 (n°2)	*8.5	*9.5	*9.0	*10									

- * CO₂ with cover closed. Without cover (chamber open) the value is less than **0.2%**.
- ** value read on the boiler front panel display to multiply **x 10** (e.g.: 150 corresponds to 1500 rpm)



To simplify calibration of the gas valve, set the “calibration function” directly on the boiler control panel as described in section 12.2.




For cascade ducts, change the parameter P60 increasing the number of fan revolutions by 200 (see table 1B in chapter 10.3).

16. ADJUSTMENT AND SAFETY DEVICES

The boiler has been designed in full compliance with European reference standards and in particular is equipped with the following:

- **Limit thermostat**

Thanks to a sensor placed on the CH flow line, this thermostat interrupts the flow of gas to the burner if the water in the primary circuit overheats. Under such conditions the boiler is blocked and only after the fault has been eliminated can it be ignited again by pressing .


- **Exchanger flange thermostat (260°C)**

This device is located on the exchanger flange and interrupts the flow of gas to the burner if the front insulation yields and overheats the exchanger or the flange gasket develops a fault. Press the reset button on the thermostat, eliminate the fault and then press the reset button on the boiler control panel.



It is forbidden to disable this safety device.

- **NTC flue sensor**

This device is positioned on the fumes duct. The electronic board stops gas from flowing to the burner in case of over heating. Press  to re-establish normal operating conditions.




The above reset operation is only possible if the temperature is less than 90°C.



It is forbidden to disable this safety device

- **Flame ionisation detector**

The flame sensing electrode guarantees safety of operation in case of gas failure or incomplete ignition of the main burner. In these conditions, the boiler blocks. Press  to re-establish normal operating conditions.

- **Hydraulic pressure switch**

This device allows the main burner to be ignited only if system pressure is higher than 0.5 bars.

- **Pump post-circulation**

The electronically-controlled pump post-circulation function lasts 3 minutes and is enabled, in the heating mode, if the ambient thermostat causes the main burner to go out.

- **Antifreeze device**

The electronic boiler management system includes an "antifreeze" function for the heating and DHW systems which, when flow temperature falls below 5°C, operates the burner until a flow temperature of 30°C is reached. This function is enabled when the boiler is switched on, the gas supply is open and the system is correctly pressurised.

- **Pump anti-block function**

If no heat demand is received in the heating and/or DHW modes for 24 consecutive hours, the pumps will automatically start and operate for 10 seconds.

- **Hydraulic safety valve (heating circuit)**

This device is set to 4 bar and is used for the heating circuit. Connect the safety valve to a drain trap. Do not use it to drain the heating circuit.

- **Heating pump pre-circulation**

In case of a heat demand in the heating mode, the appliance can pre-circulate the pump before the burner is ignited. This pre-circulation phase last from a few seconds to a few minutes, depending on the operating temperature and installation conditions.

The functions performed by the adjustment and safety devices are only operative if the boiler is switched on.

17. PUMP CAPACITY/ HEAD

The hydraulic pump is modulating and circulates the water between the boiler and the hydraulic separator.

KEY TO PUMP CHARTS - "SECTION" E

Q	RATE OF FLOW
H	HEAD



THE PUMP FLOW / HEAD CHARTS CAN BE CONSULTED IN ANNEX "SECTION" E AT THE END OF THE MANUAL.

18. ANNUAL SERVICING

To optimise boiler efficiency, carry out the following annual controls:

- Remove any deposits from heat exchanger using a suitable soft brush. Do not use a brush with metallic bristles;
- Remove any fallen deposits from the bottom of the inner case;
- Check the appearance and airtightness of the gaskets of the gas and combustion circuits;
- Check the state and correct position of the ignition and flame-sensing electrodes. Also check the spark gap;
- Check the state of the burner and make sure it is firmly fixed. Carefully clean them with a soft brush if necessary. Do not use a brush with metallic bristles as this might damage the injectors. Also check that the flame ports are clear;
- Check for any impurities inside the combustion chamber. Use a vacuum cleaner to do this;
- Check the pressure of the heating system;
- Check the pressure of the expansion vessel;
- Check that the fan impeller is clean and free to rotate;
- Make sure the flue and air ducts are unobstructed;
- Check for any impurities inside the siphon (for condensation boilers);
- Check the magnesium anode, where present, for boilers fitted with storage boilers;
- Clean the DHW flow sensor filter;



Before commencing any maintenance operations, make sure the boiler is disconnected from the power supply. After servicing, reset the original operating parameters of the boiler if they were changed.



Servicing shall be carried out only by authorized personnel.


18.1 CLEANING THE CONDESATE TRAP

Unscrew the lower section of the water condense trap "A".

- Clean the bottom of the trap by flushing it out with water.
- Fill the lower section with water until about 10 mm below the upper edge.
- Fasten the lower section onto the condense trap again.



Do not operate the boiler with empty condense trap to avoid risk of poisoning through the gas combustions.

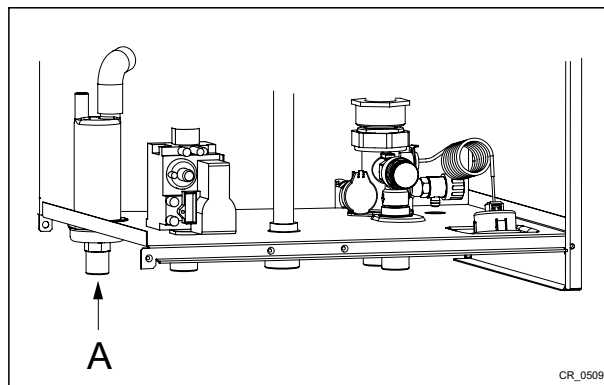

CR_0509


18.2 CLEANING THE HEAT EXCHANGER FUMES SIDE



Before starting to clean the heat exchanger, wait until the temperature is lower than 40°C and protect all the electric components against splashes of water.

Proceed as follows to clean the heat exchanger:

- Disconnect the boiler from the mains power supply.
- Close the gas inlet valve.
- Remove the front cover from the boiler.
- Lower the electrical box, ensuring it is protected against contact with water.
- Disconnect the cables of the ignition electrode, the flame sensing electrode, and the heat exchanger flange thermostat.
- Remove the fan-mixer-burner-flange assembly, unscrewing the 6 nuts M6 and the connector under the mixer.
- Protect the rear insulating panel (2) against water with a waterproof film, available in the cleaning kit.
- Accurately suck up the residue inside the combustion chamber and remove any scale, using a brush with plastic bristles available in the cleaning kit.
- Sprinkle the surfaces to be cleaned (1) generously with the appropriate liquid BX-HT Cleaner or similar using the appropriate spray bottle and wait 10 minutes (other products may be used, after consulting the authorised technical assistance service). Brush without rinsing and apply BX-HT Cleaner again. Let 10 more minutes pass, then brush again. If the result is not satisfactory, repeat the operation.
- When cleaning is finished, rinse with water.
- Replace the gasket of the burner support flange.
- To reassemble, proceed in the inverse order, tightening the 6 nuts of the flange with a torque of 5.5 Nm.

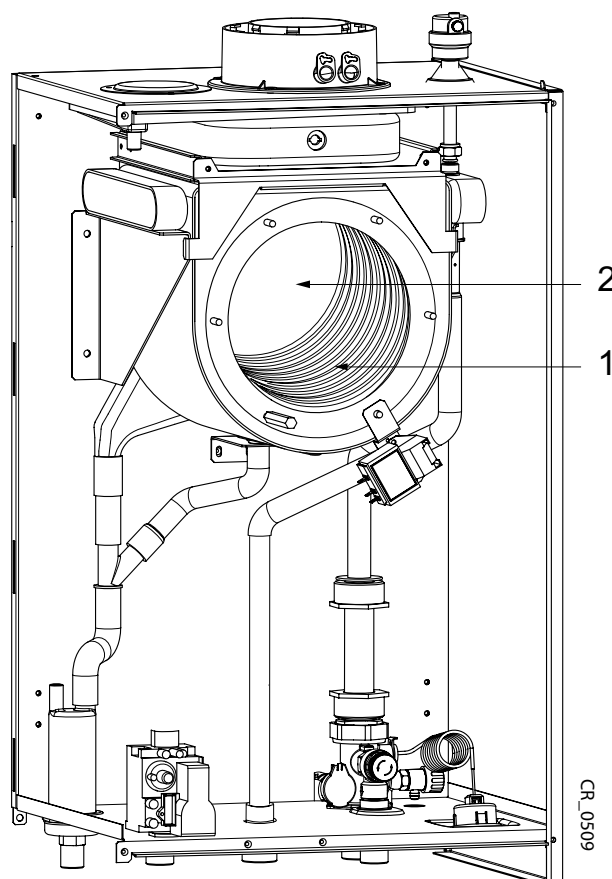



18.3 CHECKING THE BURNER

The burner needs no cleaning.

- Check the burner surface for damage, replace the burner if necessary.
- Check the positioning of the flame detection probe.
- Verify that the distance of the ignition electrode is within tolerance as shown in the figure.
- Check that the burner surface insulation in the burner flange it is not damaged otherwise replace it.



Connect the gas supply with a new gasket, open the gas supply and check the boiler for gas leaks using a leak testing spray.

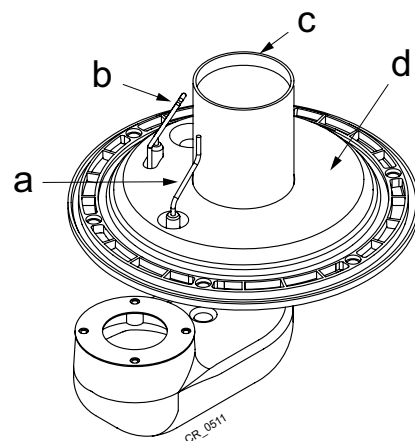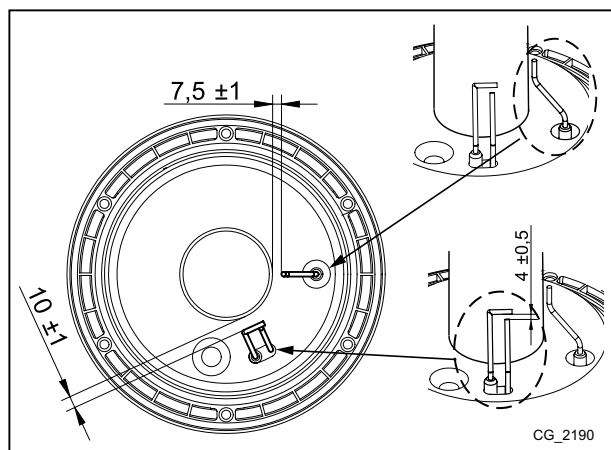


a	Flame detection probe
b	Ignition electrode
c	Burner
d	Burner surface insulation

18.4 COMBUSTION PARAMETERS

To measure combustion efficiency and the emissions of the products of combustion, the boiler is fitted with two dedicated test points. One connection point is connected to the flue gas discharge circuit (**A**), and allows monitoring of the quality of the combustion products and the combustion efficiency. The other is connected to the combustion air intake circuit (**B**), allowing checking of any recycling of the combustion products in case of coaxial pipelines. The following parameters can be measured at the connection point on the flue gas circuit:

- temperature of the combustion products;
- oxygen (O_2) or carbon dioxide (CO_2) concentration;
- carbon monoxide (CO) concentration.

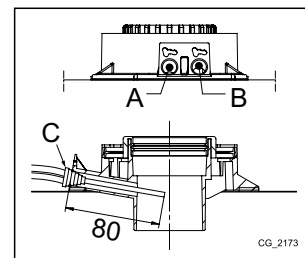

The temperature of the combustion air must be measured on the test point located on the air intake flue (**B**) by inserting the measurement sensor by about 80 mm (**C**).




To enable the " CHIMNEY SWEEP MODE " consult section 12.3.

19. TECHNICAL SPECIFICATIONS


Model: LUNA DUO-TEC MP		1.35	1.50	1.60	1.70
Cat.		II _{2H3P}			
Gas used	-	Natural Gas - Propane Gas			
Nominal Gas Consumption (NG)	MJ/h	140	185	225	265
Nominal Gas Consumption (Propane)	MJ/h	140	185	225	265
Turndown Gas Consumption (NG)	MJ/h	20	20	25	29
Turndown Gas Consumption (Propane)	MJ/h	20	20	25	29
Rated heat power 80/60 °C	kW	33,8	45	55	65
Rated heat power 50/30 °C	kW	36,6	48,6	59,4	70,2
Reduced heat output 80/60 °C	kW	5,0	5,0	6,1	7,2
Reduced heat output 50/30 °C	kW	5,4	5,4	6,6	7,8
Rated efficiency 80/60 °C	%	97,4	97,4	97,2	97,2
Rated efficiency 50/30 °C	%	105,0	105,0	105,0	105,0
Efficiency 30% Pn 92/42/EEC	%	107,7	107,8	107,4	107,1
Max. water pressure in heating circuit	bar	4			
Min. water pressure in heating circuit	bar	0,5			
Temperature range in heating circuit	°C	25÷80			
Fumes typology	-	C13 - C33 - C43 - C53 - C63 - C83 - B23			
Coaxial flue duct diameter	mm	80/125			
Diameter of separate outlets	mm	80/80			
Max. mass flow rate of flue	kg/s	0,016	0,021	0,026	0,031
Min. mass flow rate of flue	kg/s	0,002	0,002	0,003	0,004
Max. temperature of flue	°C	90	92	96	76
NOx Class 5 (EN 297 - EN 483)	mg/kWh	31,8	29,8	34,1	34,8
Natural gas supply pressure 2H	kPa	1.13			
Propane gas supply pressure 3P	kPa	2.75			
Power supply voltage	V	230			
Power supply frequency	Hz	50			
Rated power supply	W	180	190	210	210
Net weight	kg	40	40	40	50
Dimensions - height	mm	766			
- width	mm	450			
- depth	mm	377	377	377	505
Protection-limit against humidity (EN 60529)	-	IPX5D			
Capacity of boiler circuit (volume of water)	l	4	4	5	6
Noise level at 1 metre	dB(A)	< 50			
EC certificate	Nr.	0085CM0128			

CONSUMPTION AT HEAT INPUT Q_{max} and Q_{min}

Q _{max} (Natural gas) - 2H	m ³ /h	3,68	4,90	5,98	7,07
Q _{min} (Natural gas) - 2H	m ³ /h	0,54	0,54	0,67	0,78
Q _{max} (Propane Gas) - 3P	kg/h	2,70	3,60	4,40	5,20
Q _{min} (Propane Gas) - 3P	kg/h	0,40	0,40	0,49	0,57

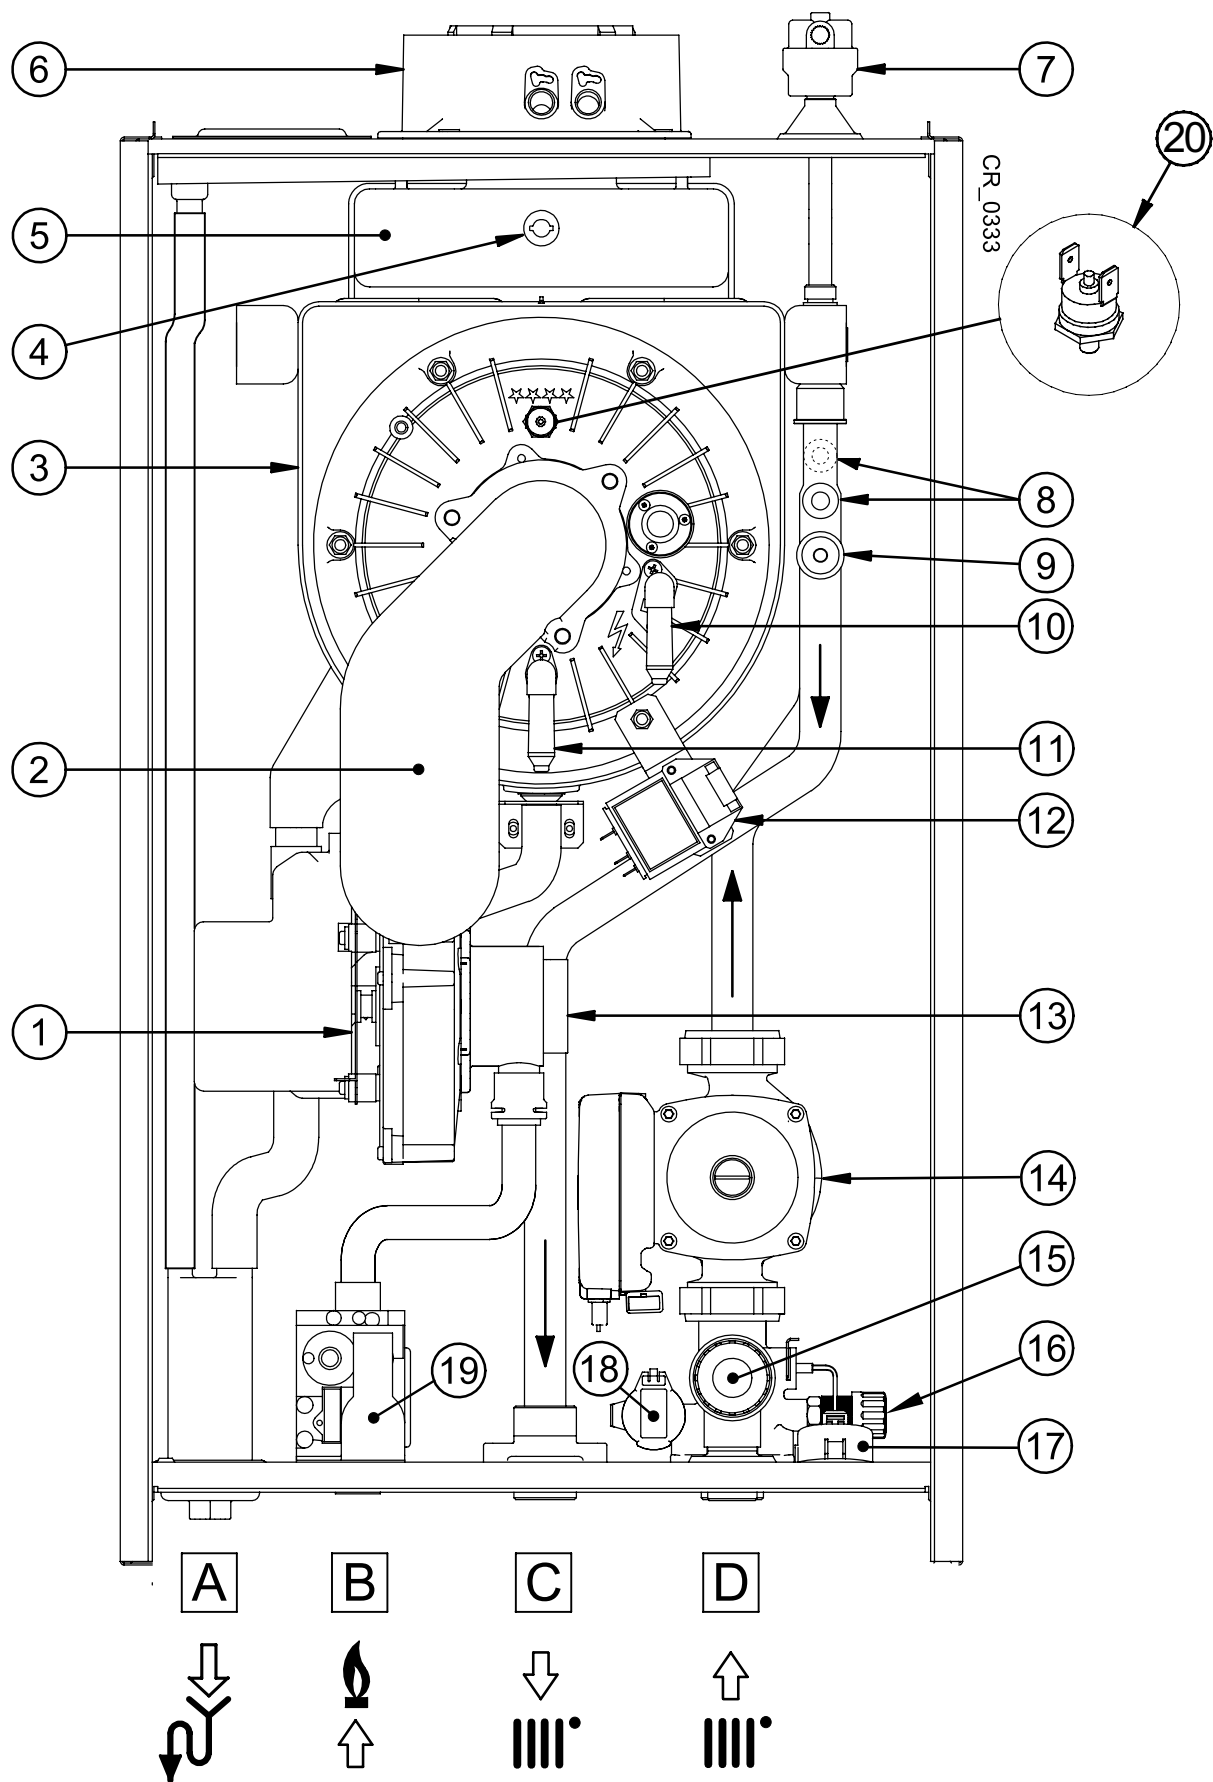


	en
1	Fan
2	Air/gas blend manifold
3	Primary exchanger
4	Flue sensor
5	Flue hood
6	Coaxial flue connector
7	Automatic air vent
8	NTC water heating sensor (flow and return)
9	Safety overflow temperature thermostat
10	Ignition electrode
11	Flame detection electrode
12	Spark generator
13	Venturi
14	Pump
15	Hydraulic Safety valve
16	Boiler drain tap
17	Pressure gauge
18	Hydraulic Pressure Sensor
19	Gas valve
20	Exchanger flange thermostat
A	Trap condensate drain
B	Gas inlet connection
C	Heating flow connection
D	Heating return connection

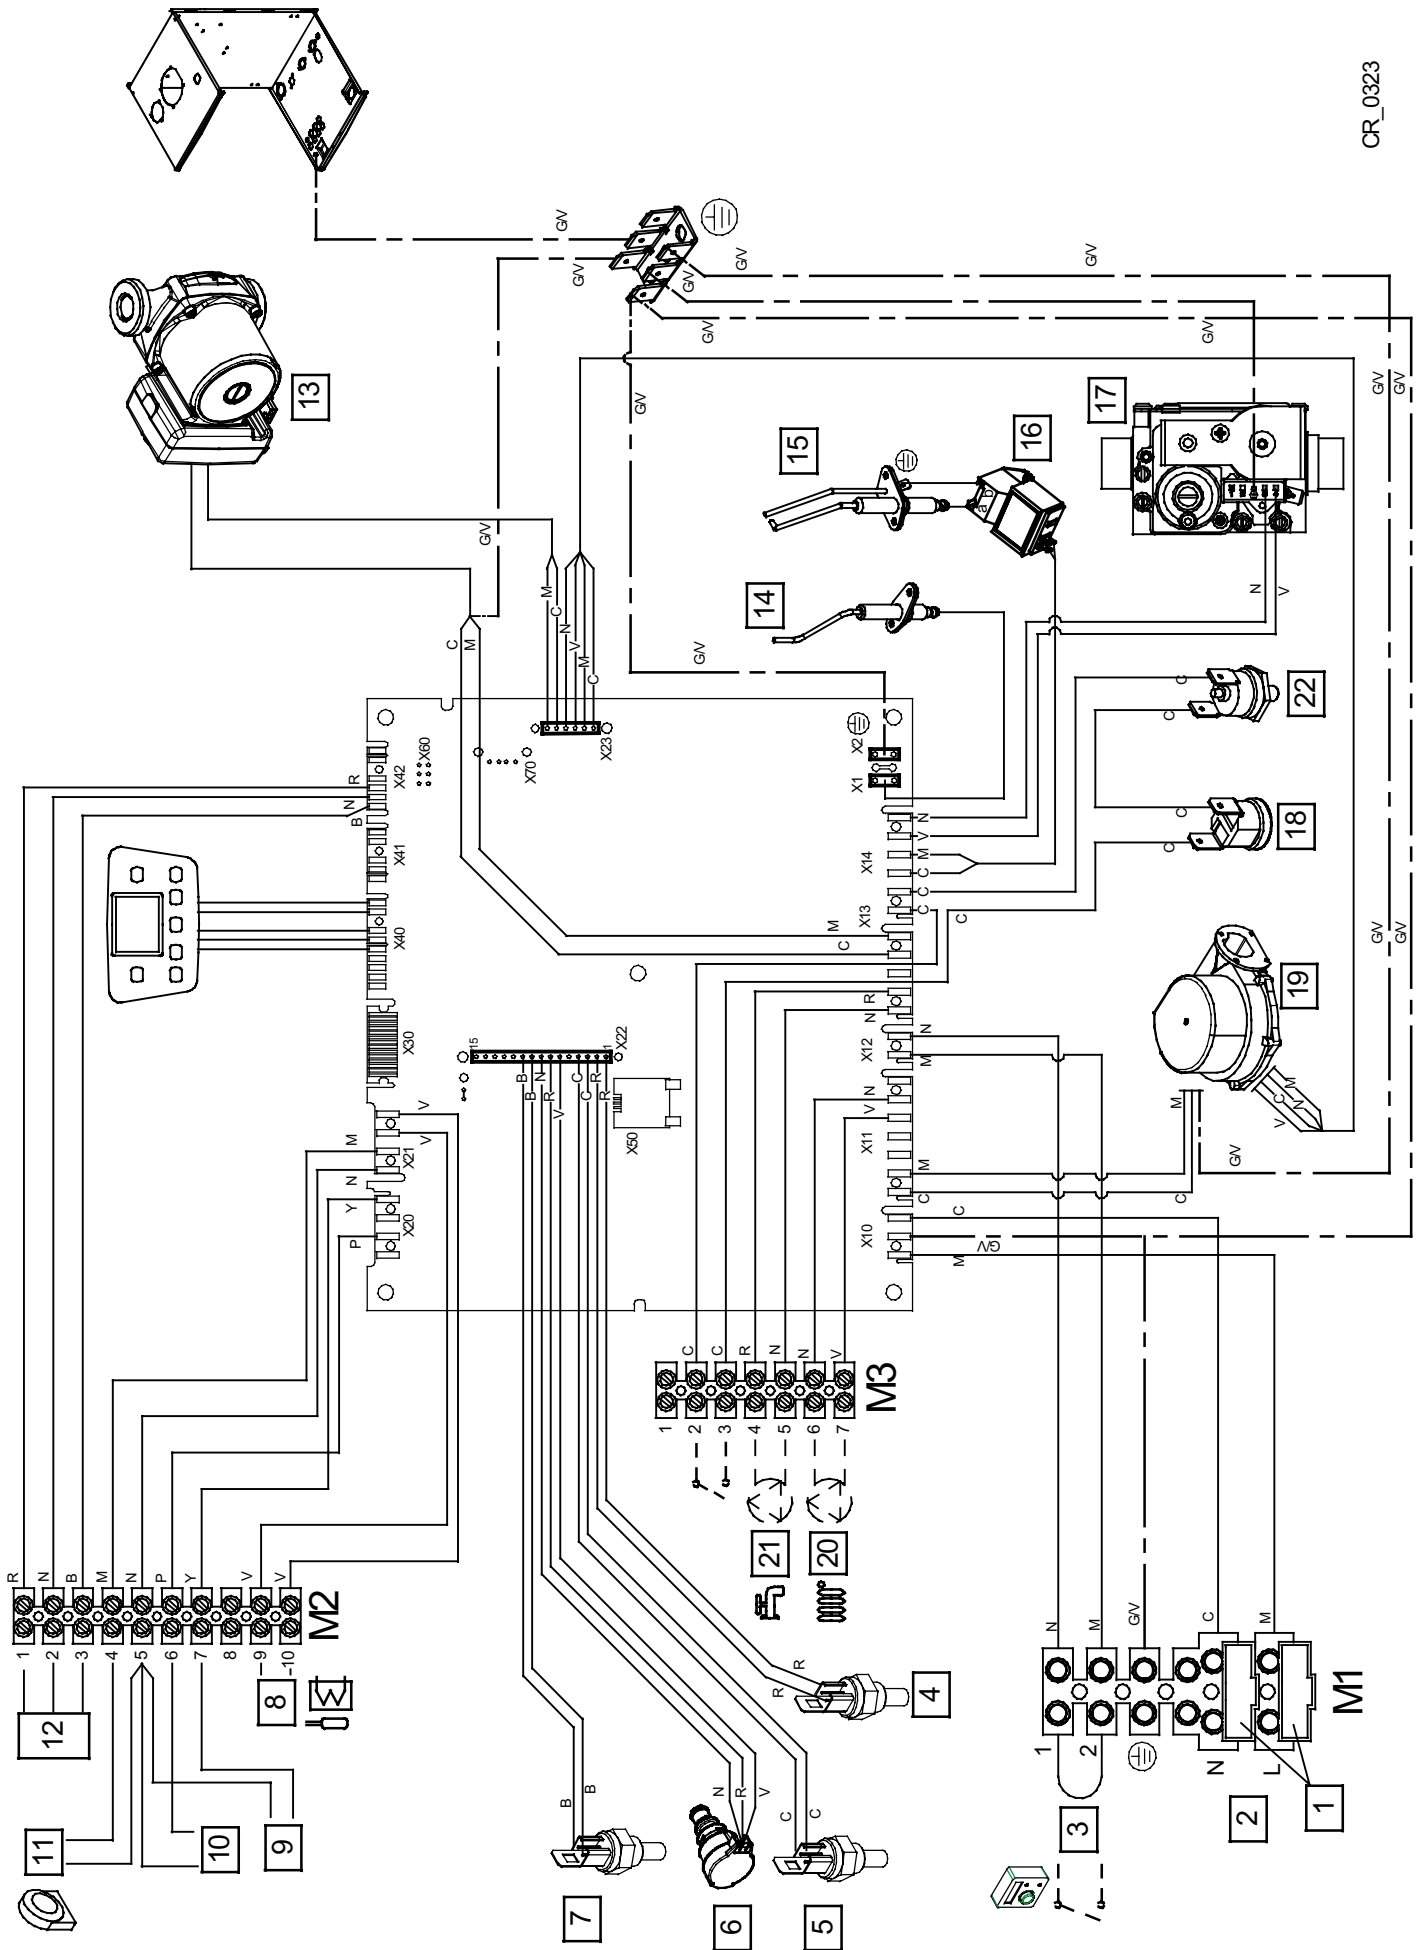


en	
1	Fuses
2	230 V Power Supply
3	Room Thermostat (RT)
4	Heating flow sensor
5	Heating return sensor
6	Water pressure sensor
7	Fumes sensor
8	DHW tank sensor
9	Auxiliary Sensor 1
10	Auxiliary Sensor 2
11	Outdoor sensor
12	Remote Control
13	Pump
14	Flame sensor electrode
15	Ignition electrode
16	Igniter
17	Gas valve
18	Safety Thermostat
19	Fan
20	Heating circuit pump
21	DHW boiler tank pump
22	Exchanger flange thermostat
C	Blue
M	Brown
N	Black
R	Red
G/V	Yellow/Green
V	Green
B	White
G	Grey
Y	Yellow
P	Violet


LUNA DUO-TEC 1.35 - 1.50 - 1.60

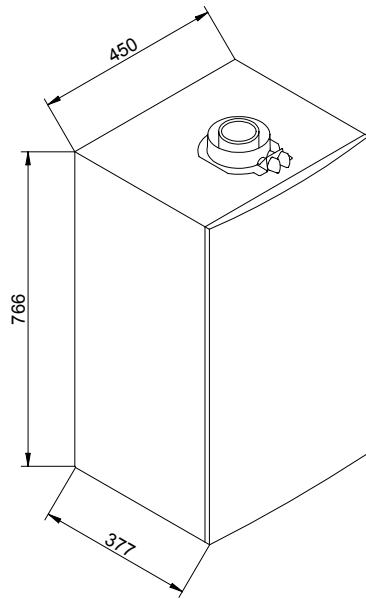


LUNA DUO-TEC 1.70

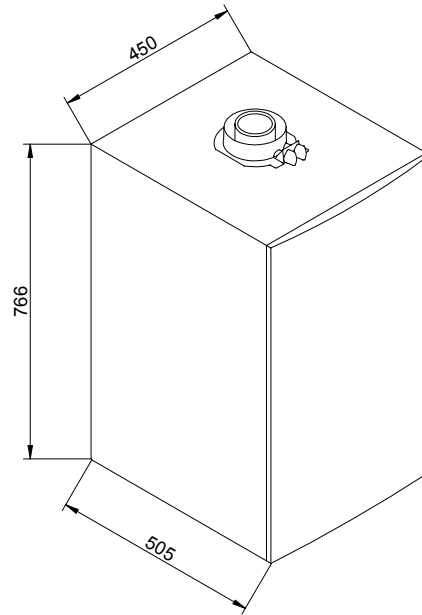


CR_0346



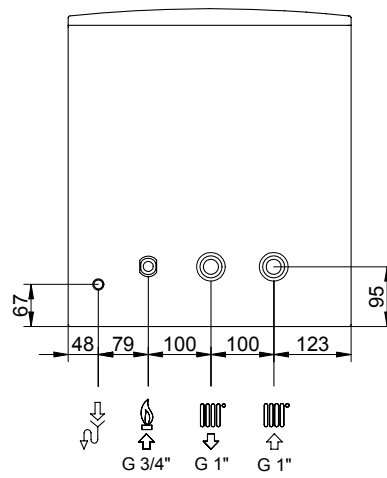


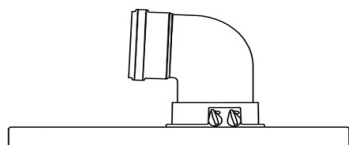


A B	$L_{\max} = 10 \text{ m} - \varnothing 80/125 \text{ mm}$
C D	$L_{\max} = 9 \text{ m} - \varnothing 80/125 \text{ mm}$
E F	$L_{\max} = 10 \text{ m} - \varnothing 80/125 \text{ mm}$
G	$L_{\max} = 8 \text{ m} - \varnothing 80/125 \text{ mm}$
H	$L_{\max} = 9 \text{ m} - \varnothing 80/125 \text{ mm}$

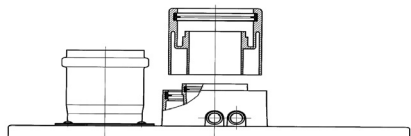


I	$(L1+L2) \max = 60 \text{ m} - \varnothing 80 \text{ mm} (1.35 \text{ MP})$ $(L1+L2) \max = 60 \text{ m} - \varnothing 80 \text{ mm} (1.50 \text{ MP})$ $(L1+L2) \max = 40 \text{ m} - \varnothing 80 \text{ mm} (1.60 \text{ MP})$ $(L1+L2) \max = 30 \text{ m} - \varnothing 80 \text{ mm} (1.70 \text{ MP})$ $L1 \max = 15 \text{ m}$ $L2 \max = 20 \text{ m} - \varnothing 80 \text{ mm} (1.70 \text{ MP})$
L	$L \max = 15 \text{ m}$

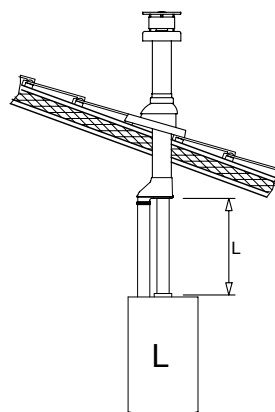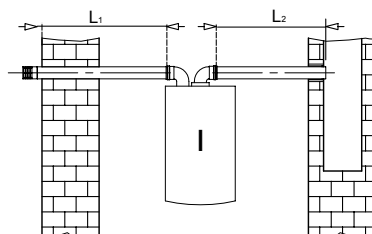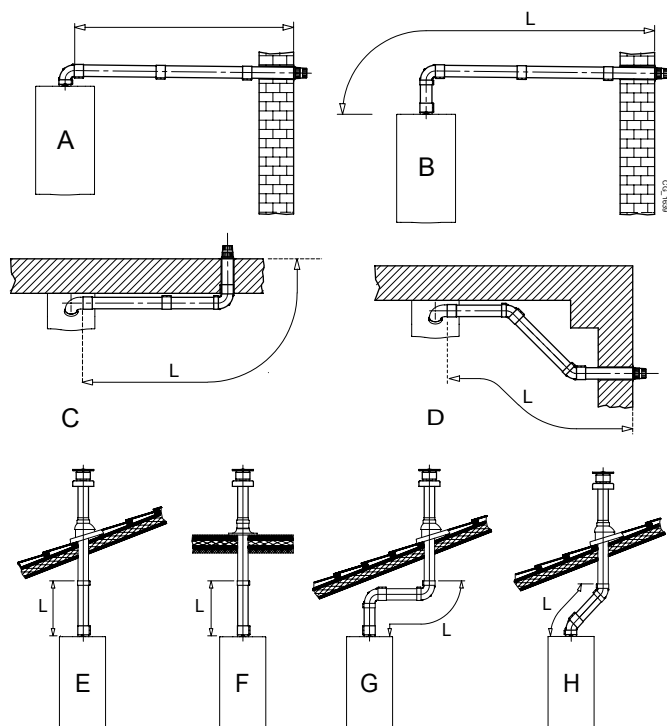





MP 1.35 - 1.50

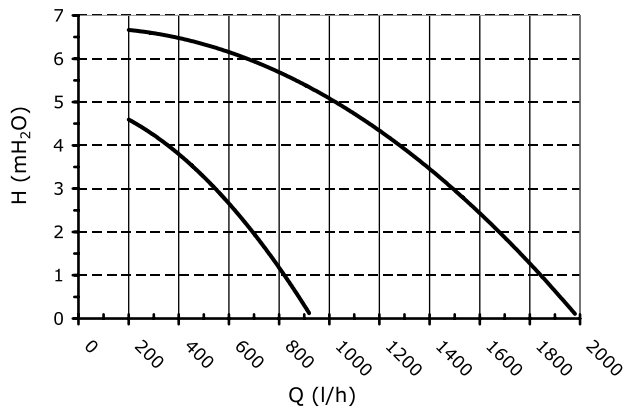


MP 1.60




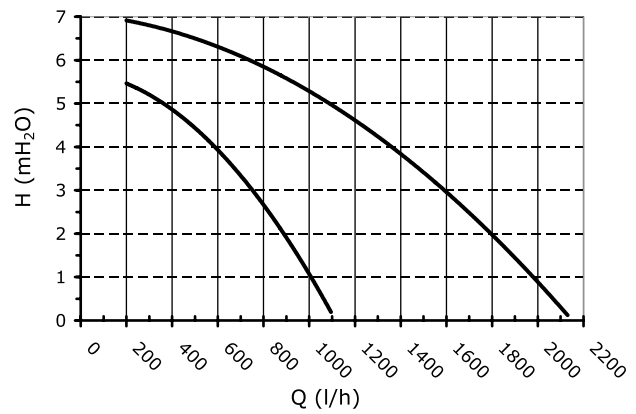





MP 1.70

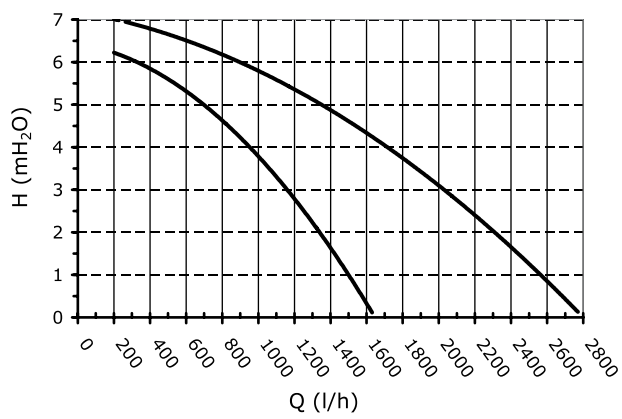

SIEMENS
QAC34

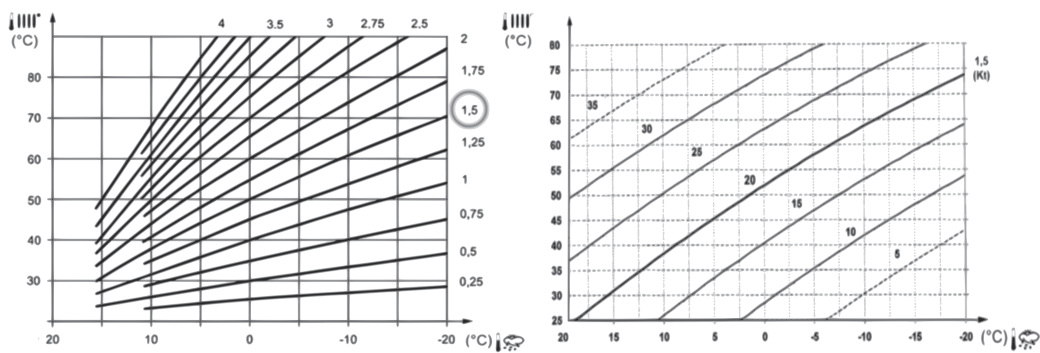

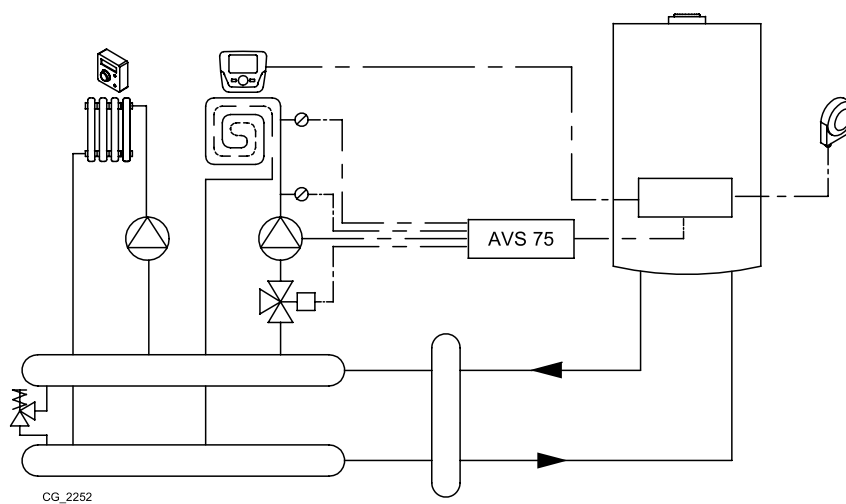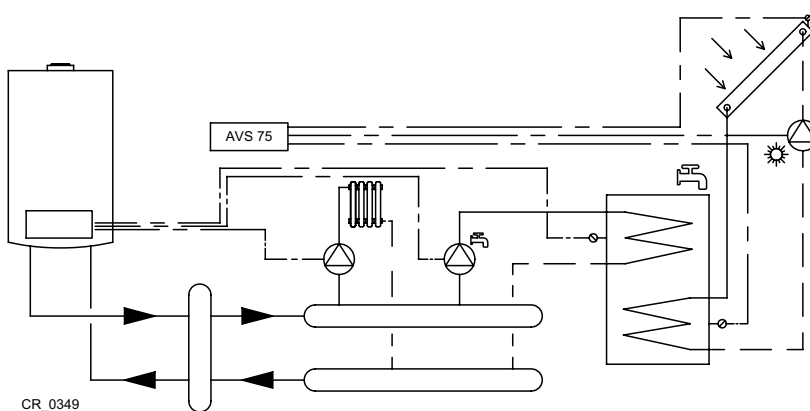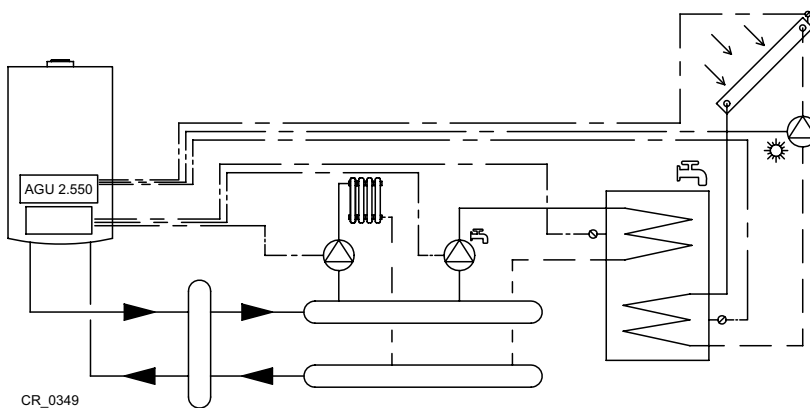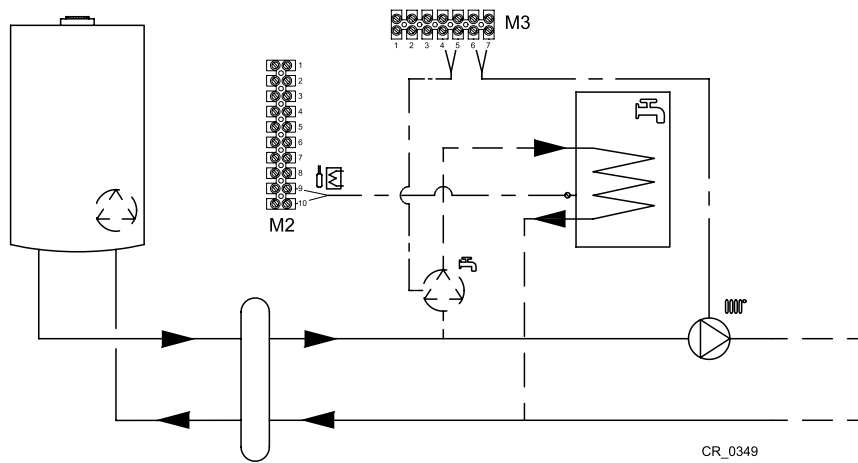

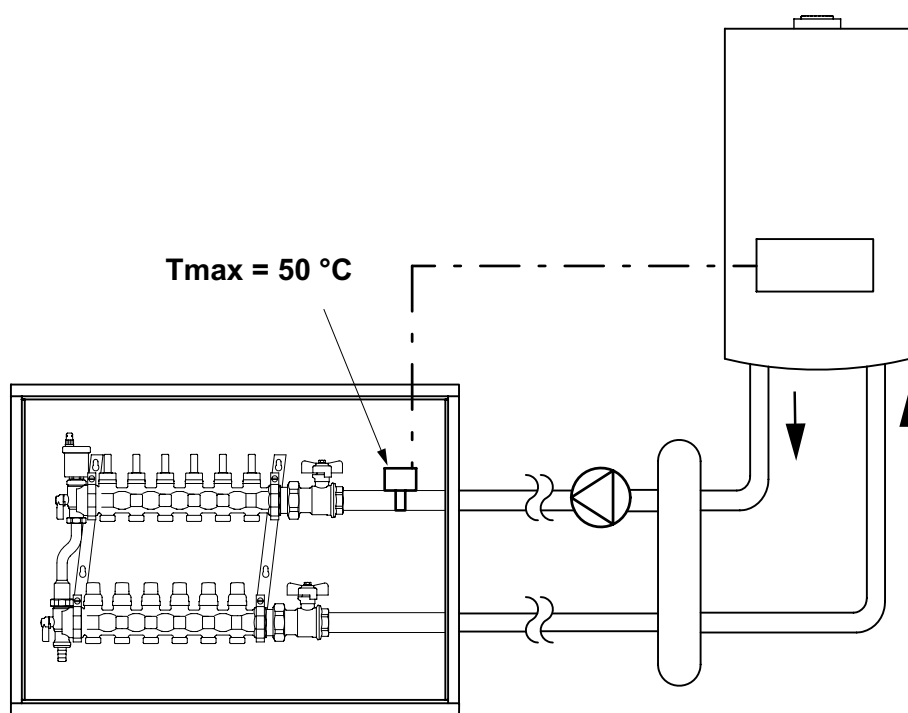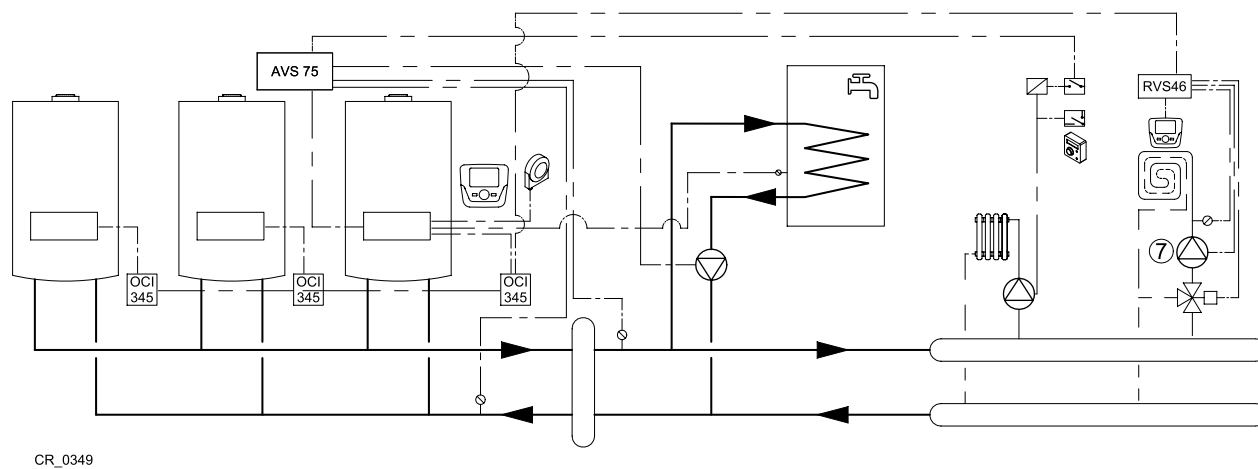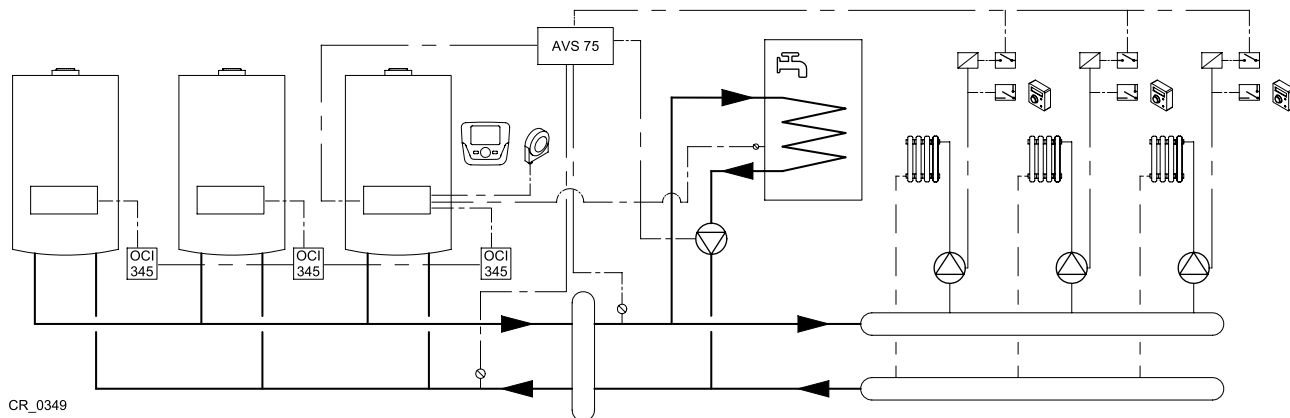

Australian Agent and Distributor:



HYDROHEAT SUPPLIES PTY LTD
PO BOX 1045 / 6 HELEN KOB DRIVE,
BRAESIDE VICTORIA 3195
PH: (03) 9588 1299 - FAX: (03) 9588 2199

BAXI

36061 Bassano del Grappa (VI) - ITALIA
Via Trozzetti, 20
Servizio clienti: tel. 0424-517800 – Telefax 0424-38089
www.baxi.it